
Swish Console Desk

DESIGNED IN 2014

ASSEMBLY NOTES | REV 00




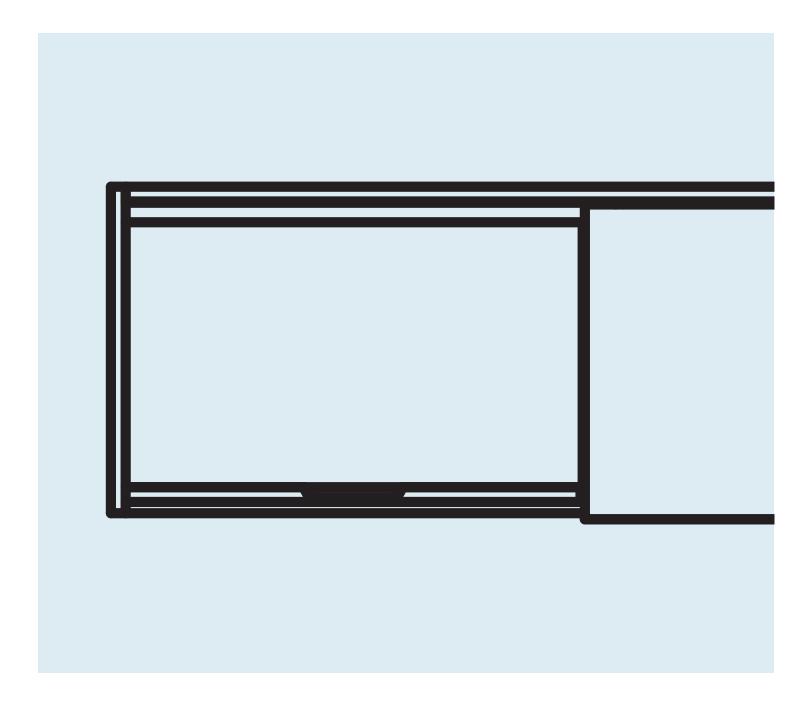

JE NE SAIS QUOI.

We don't know exactly what it is, but it is whatever you need it to be. Sliding top to conceal or reveal more work space. Pencil and/or junk drawer. NEED A HAND?


Contact us at **service@bludot.com** or **844.425.8368** for assistance.

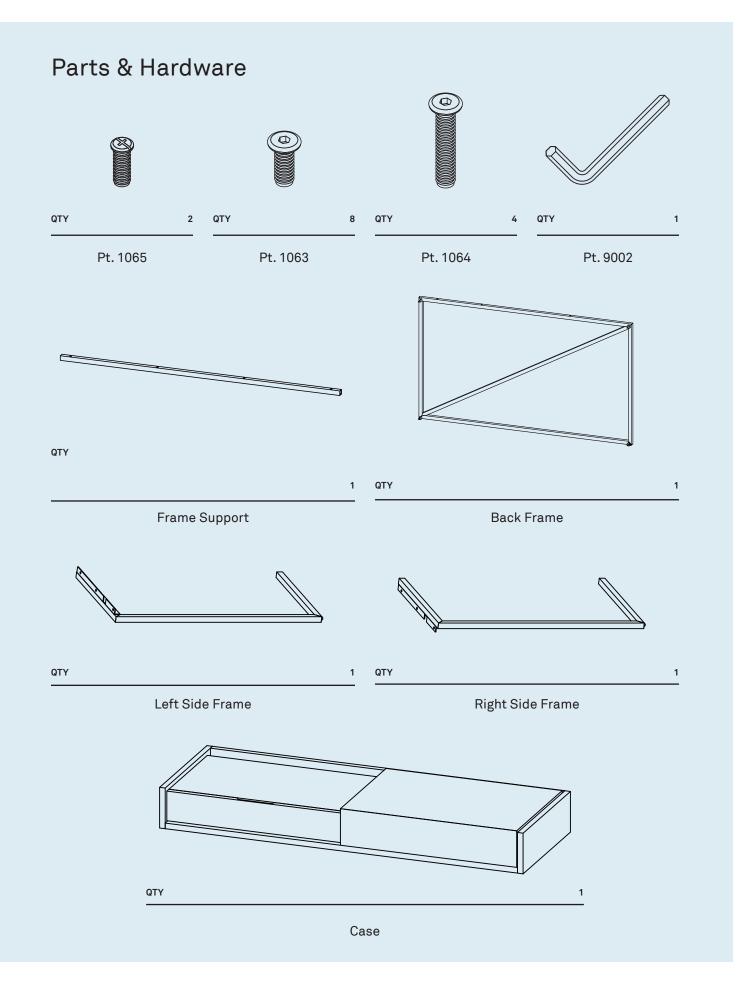

1 | 844.425.8368 SWISH CONSOLE DESK

REMOVE TOP SLIDER BEFORE ASSEMBLY.


Remove sliding top frame prior to assembly to prevent damage.

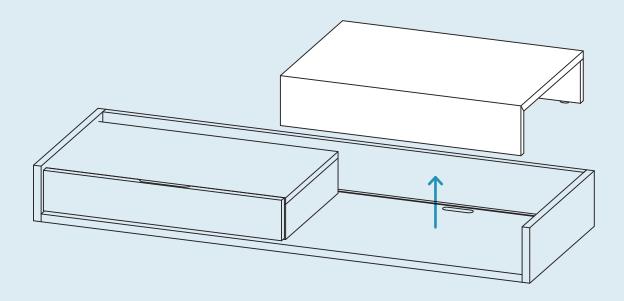


ASSEMBLY NOTES SERVICE@BLUDOT.COM | 2

ATTACHING THE FRAME SUPPORT.

Attach the frame support rail to the bottom face of the case as shown using the provided hardware.

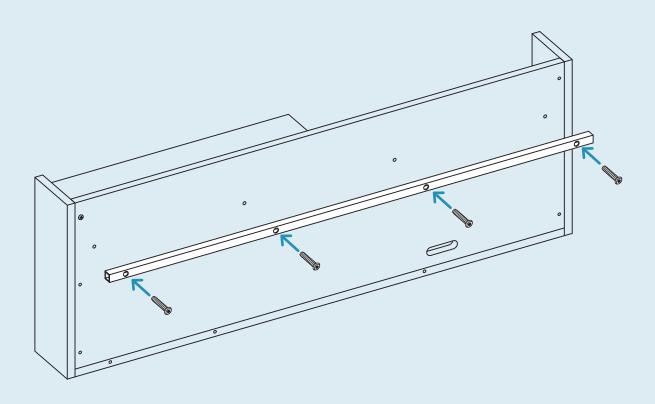


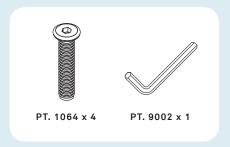

3 | 844.425.8368 SWISH CONSOLE DESK

ASSEMBLING THE BASE FRAME.


Assemble the base frame as shown using the provided hardware.

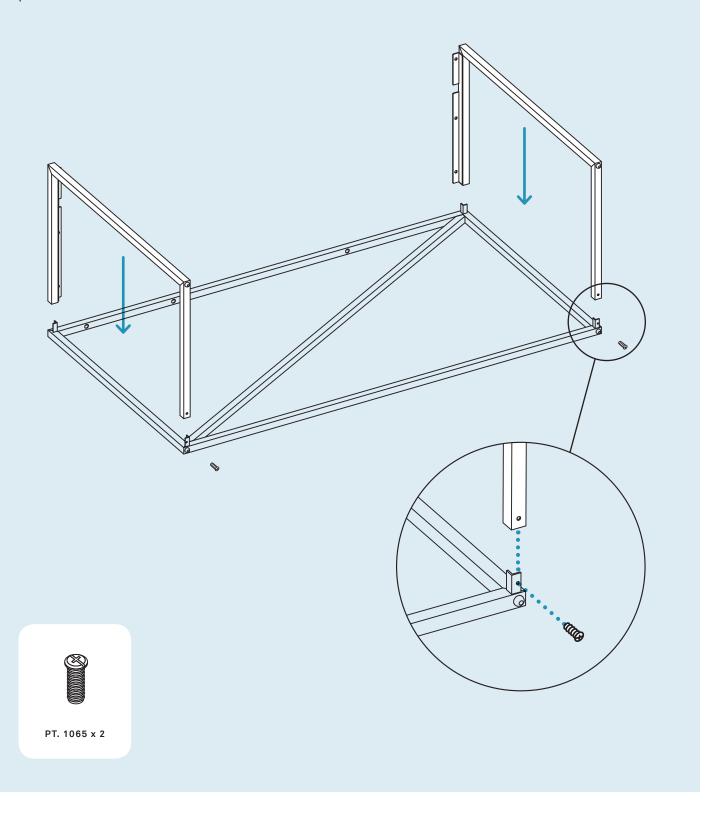


ASSEMBLY NOTES SERVICE@BLUDOT.COM | 4

ATTACHING THE BASE FRAME.

Attach the base frame to the case as shown using the provided hardware.

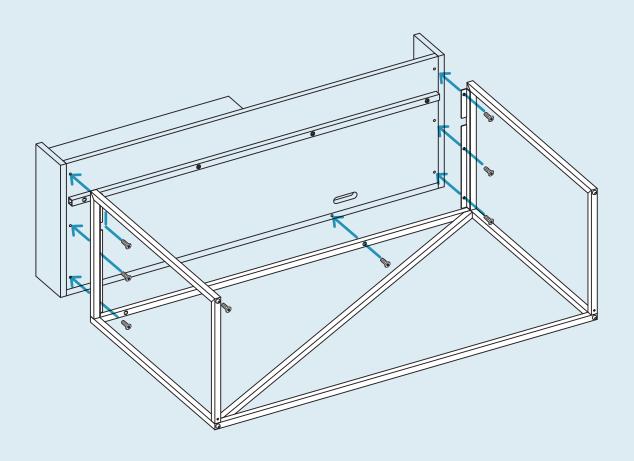


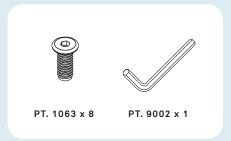

5 | 844.425.8368 SWISH CONSOLE DESK

PLACING THE TOP SLIDER.

Align the shift wheels with the track at the back of the table top. Gently lower into place.

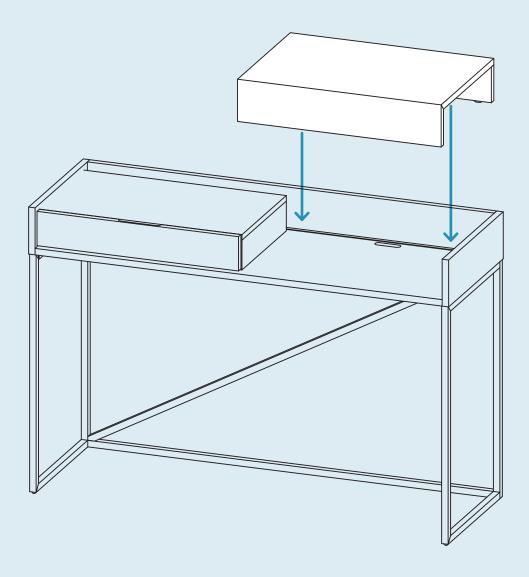

ASSEMBLY NOTES SERVICE@BLUDOT.COM | 6

Additional Information CLEAN Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

