
D3 Bookcase Add-on Unit

DESIGNED IN 2012

ASSEMBLY NOTES | REV 00

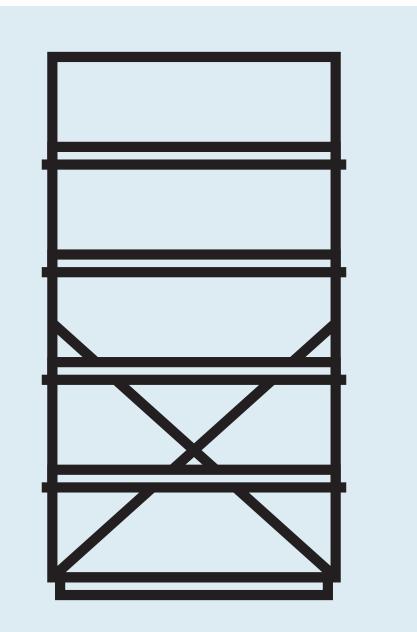




NEED A HAND?


Contact us at **service@bludot.com** or **844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

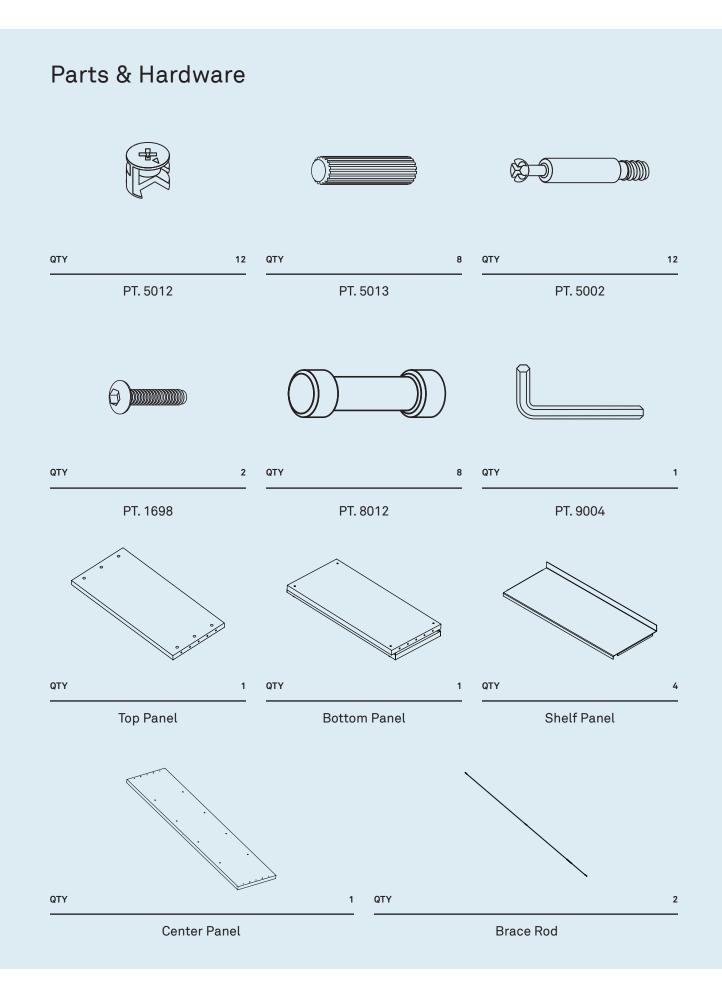

How to use the cam lock system

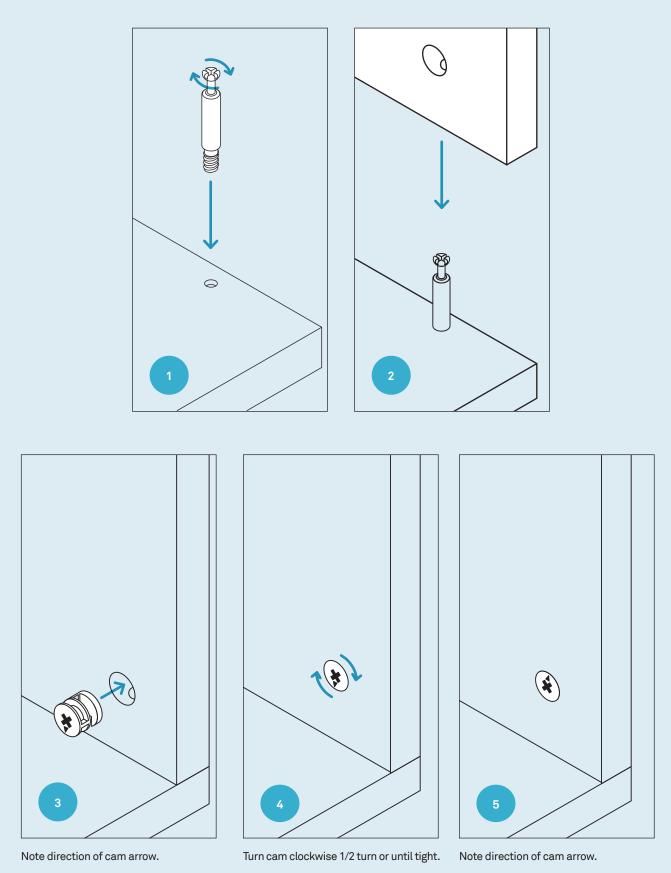

Step 01


ASSEMBLE CASE.

Assemble this bookcase on a soft, flat surface with the help of another individual.

Screw PT. 5002 flush in the center panel.

Carefully tap **PT. 5013** into place in the center panel.

Refer to page 2 for instructions on how to use **PT.5012** to lock hardware in place.

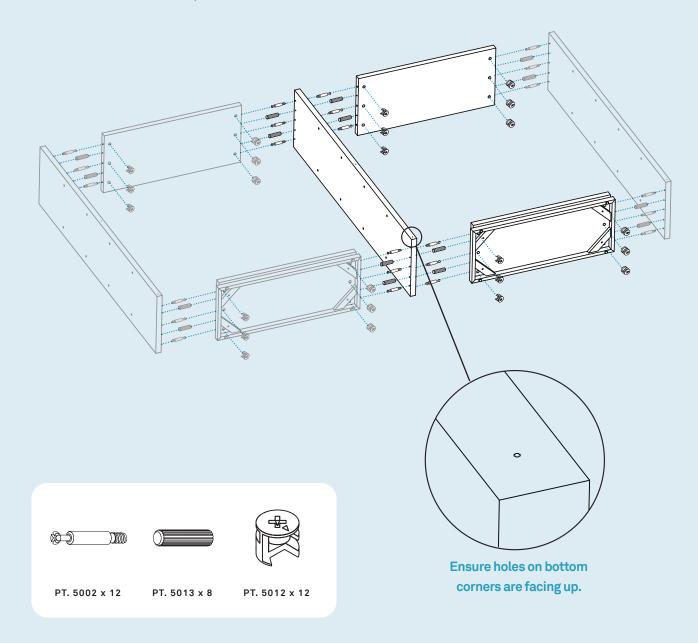


Step 02

ATTACH BRACE RODS.

Attach brace rods to panels using provided hardware as shown.


Check that the case is square. Adjust rod lengths to line up with holes.



Step 03

TIGHTEN BRACE RODS.


After the brace rods are screwed down, give them a final tightening.

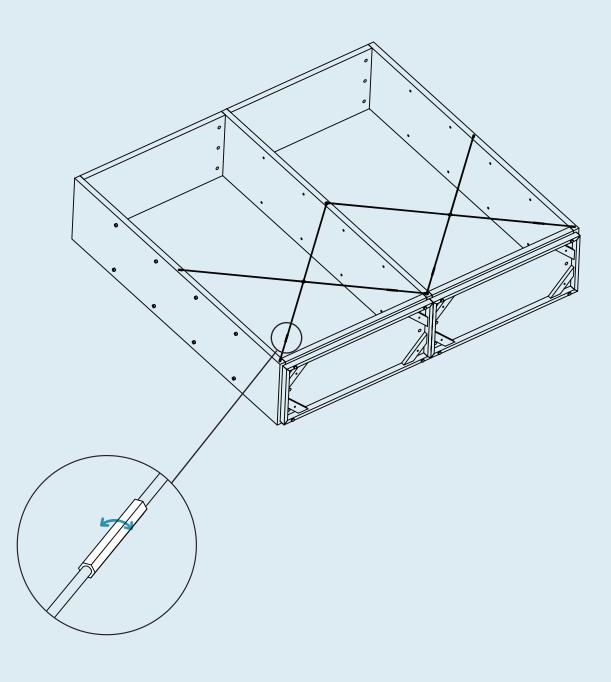



ATTACH SHELF PINS.

Thread shelf pins into place as shown.

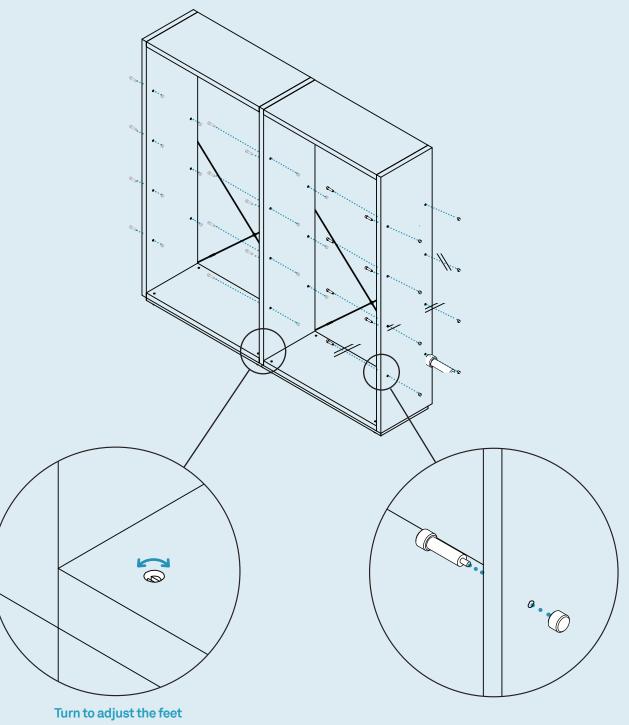


height to level the case.



INSTALL SHELVES.

Place shelf panels into the case as shown. Ensure that the case is level prior to use.

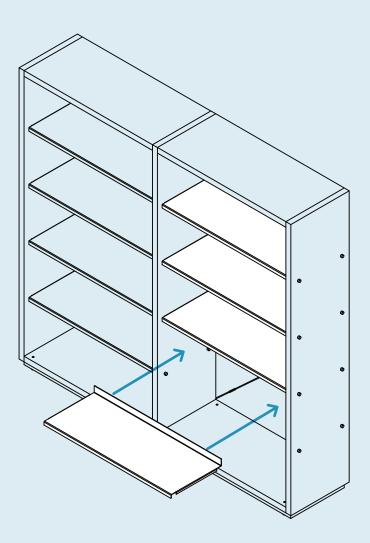

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood and metal furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

