


DITTO

ASSEMBLY NOTES

THAT GOES
DOUBLE FOR ME!

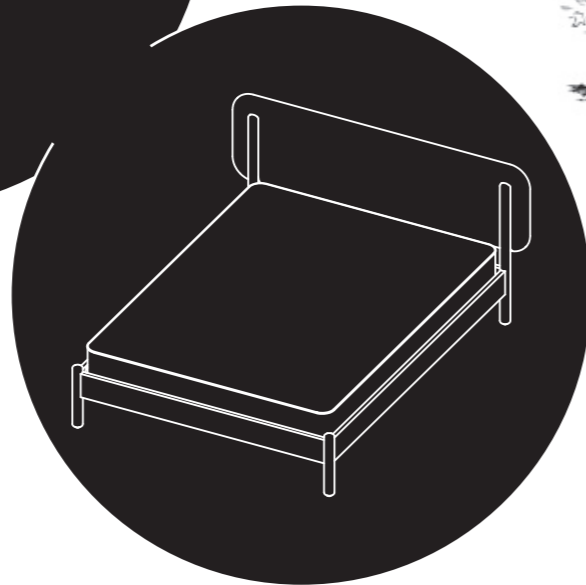


HARDWARE

x8
8039




x4
1601

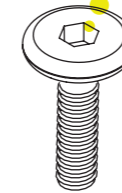


x2
1604



x12
3001




x8
1213




x8
3002



x8
2001




x6
1401




x4
5013




x1
9018

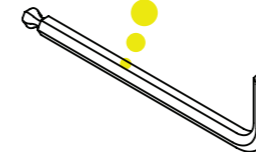

x1
9019

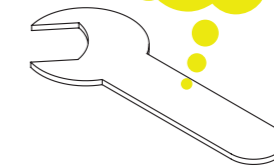


x8
8038

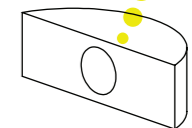

PARTS


x2

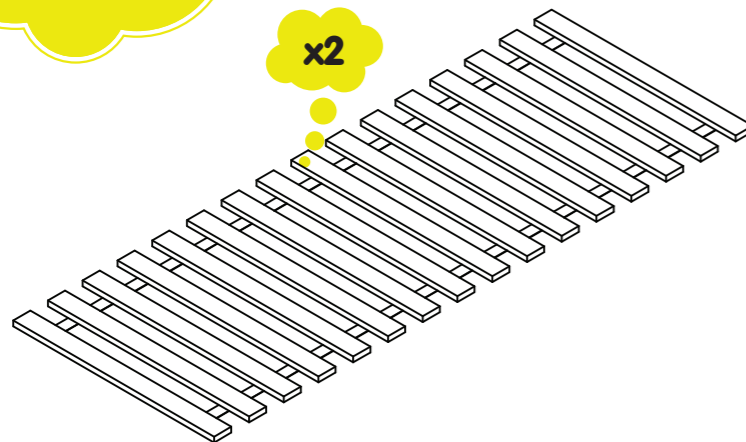


x2




x1

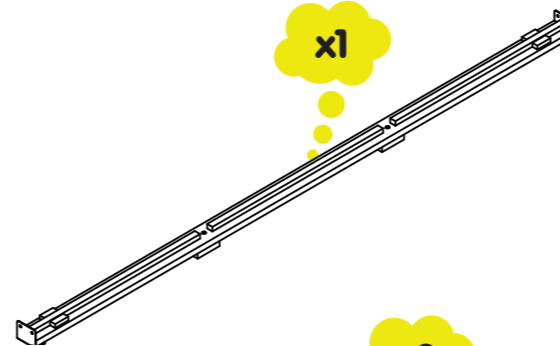


x2




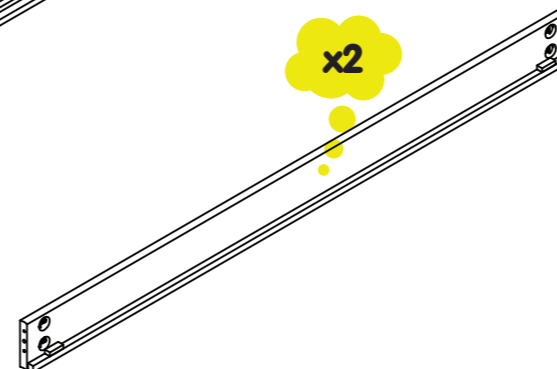


x1

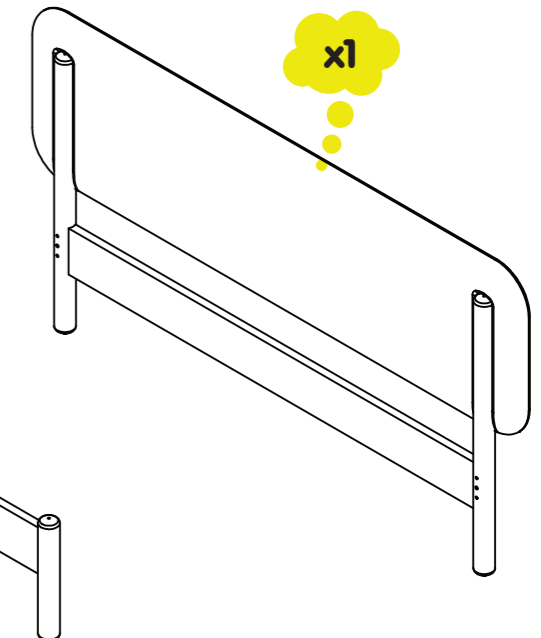


x1

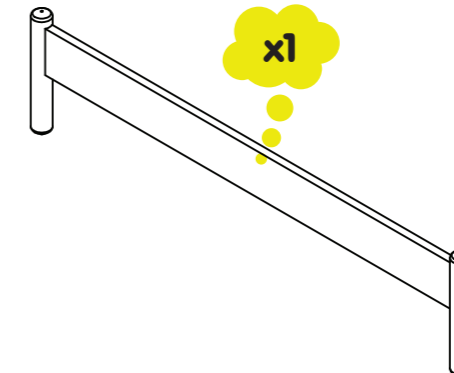

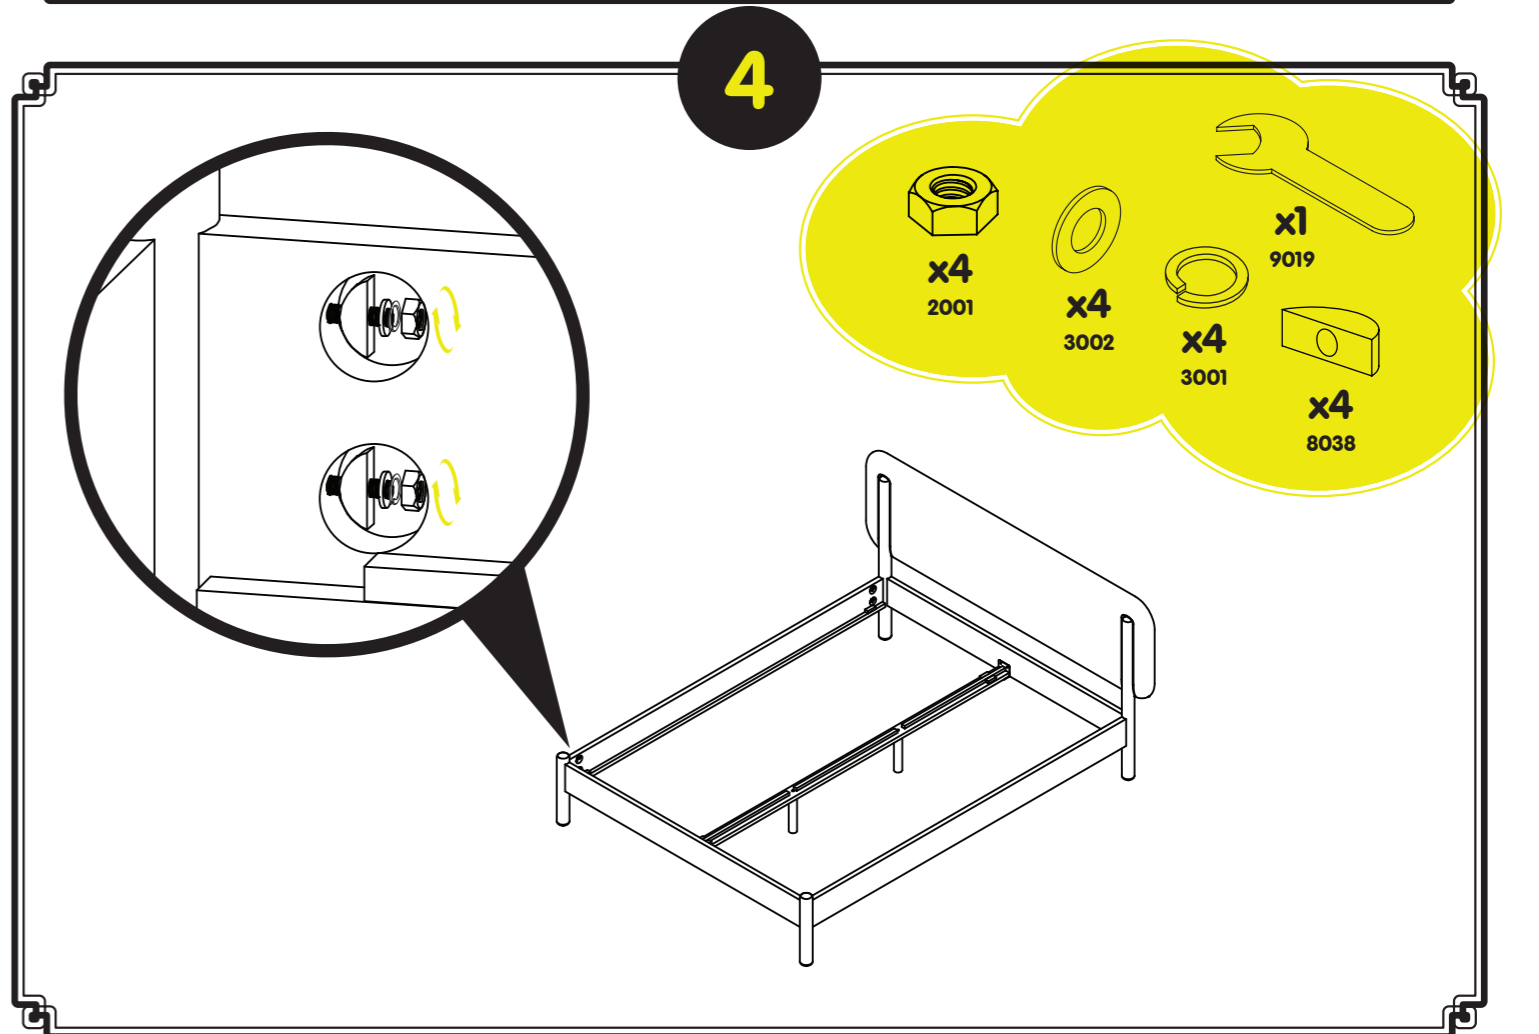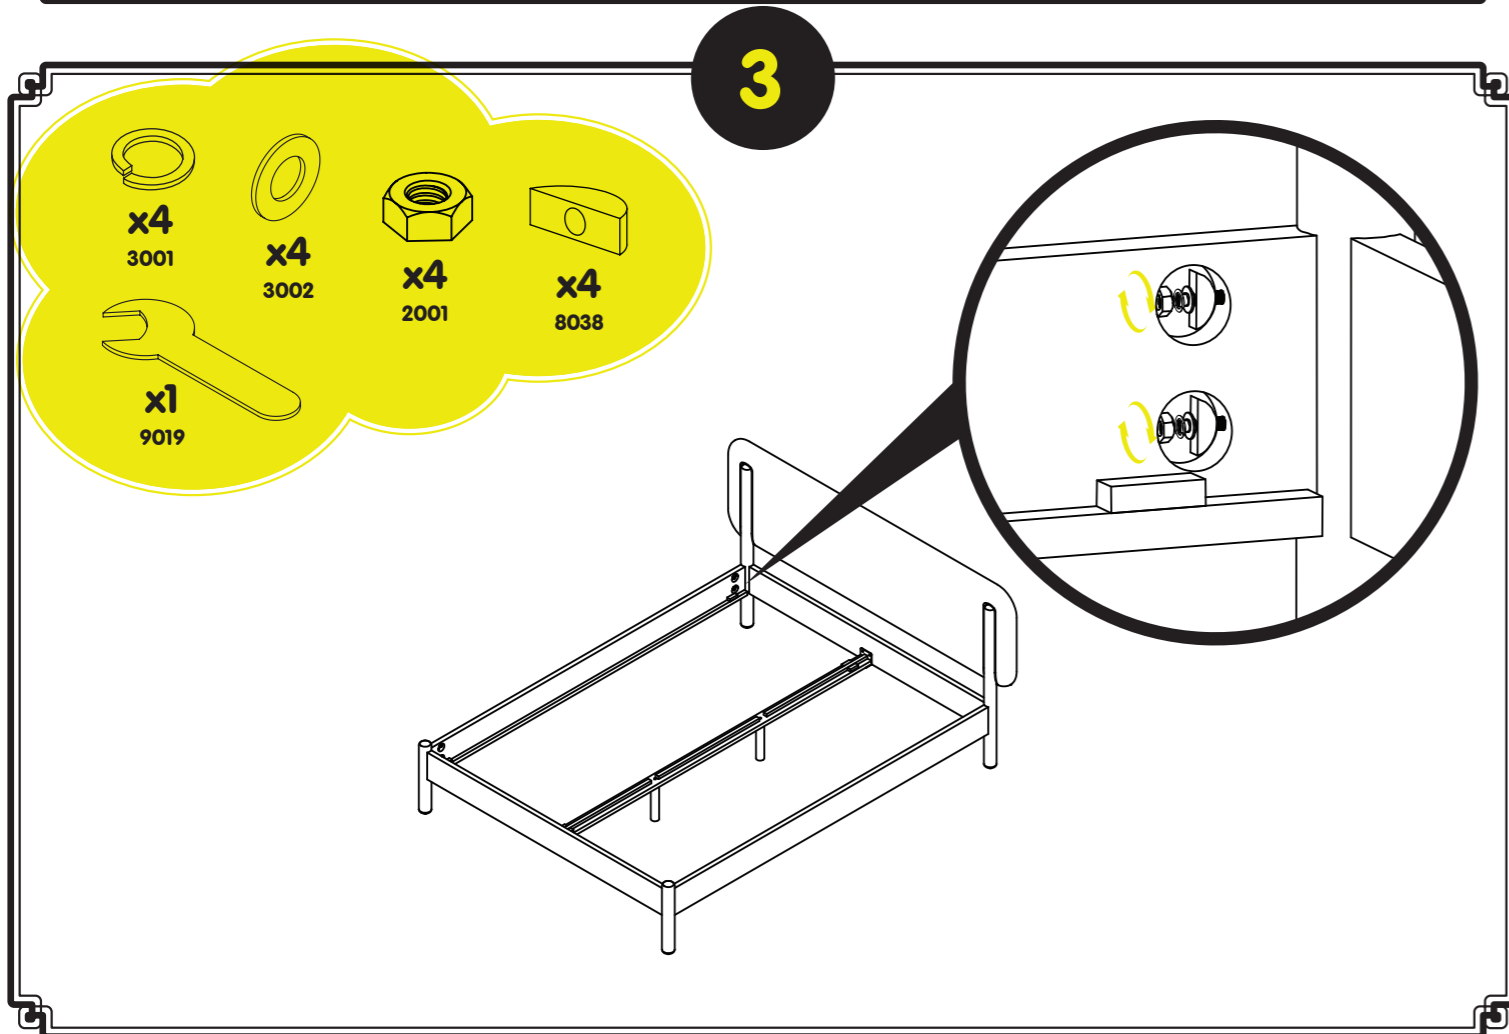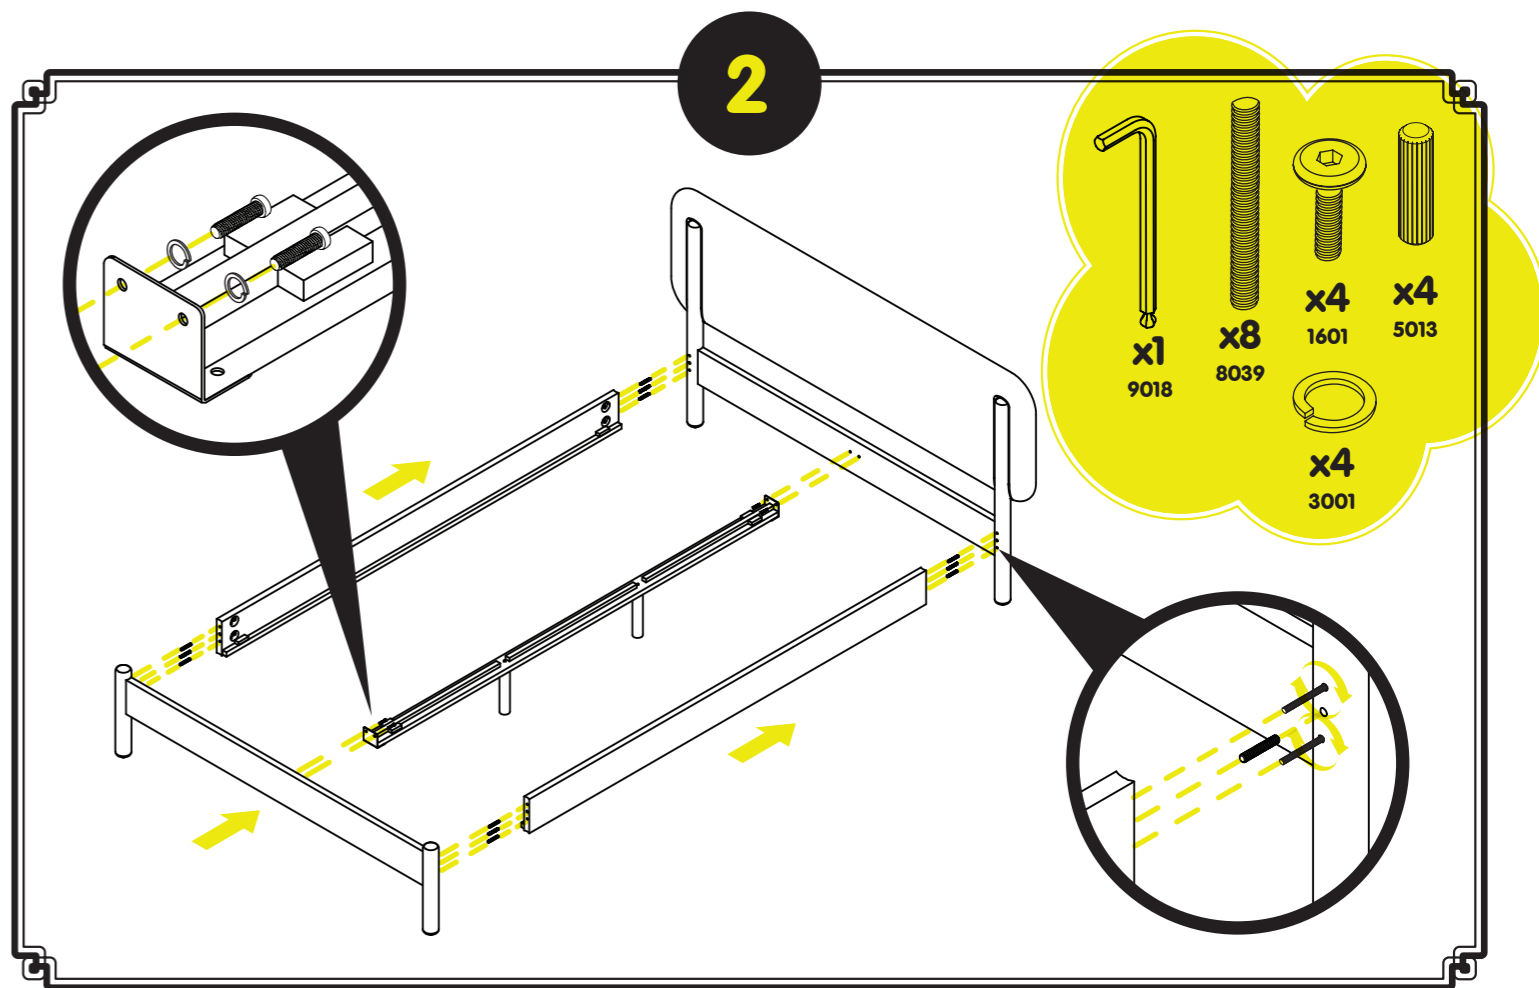
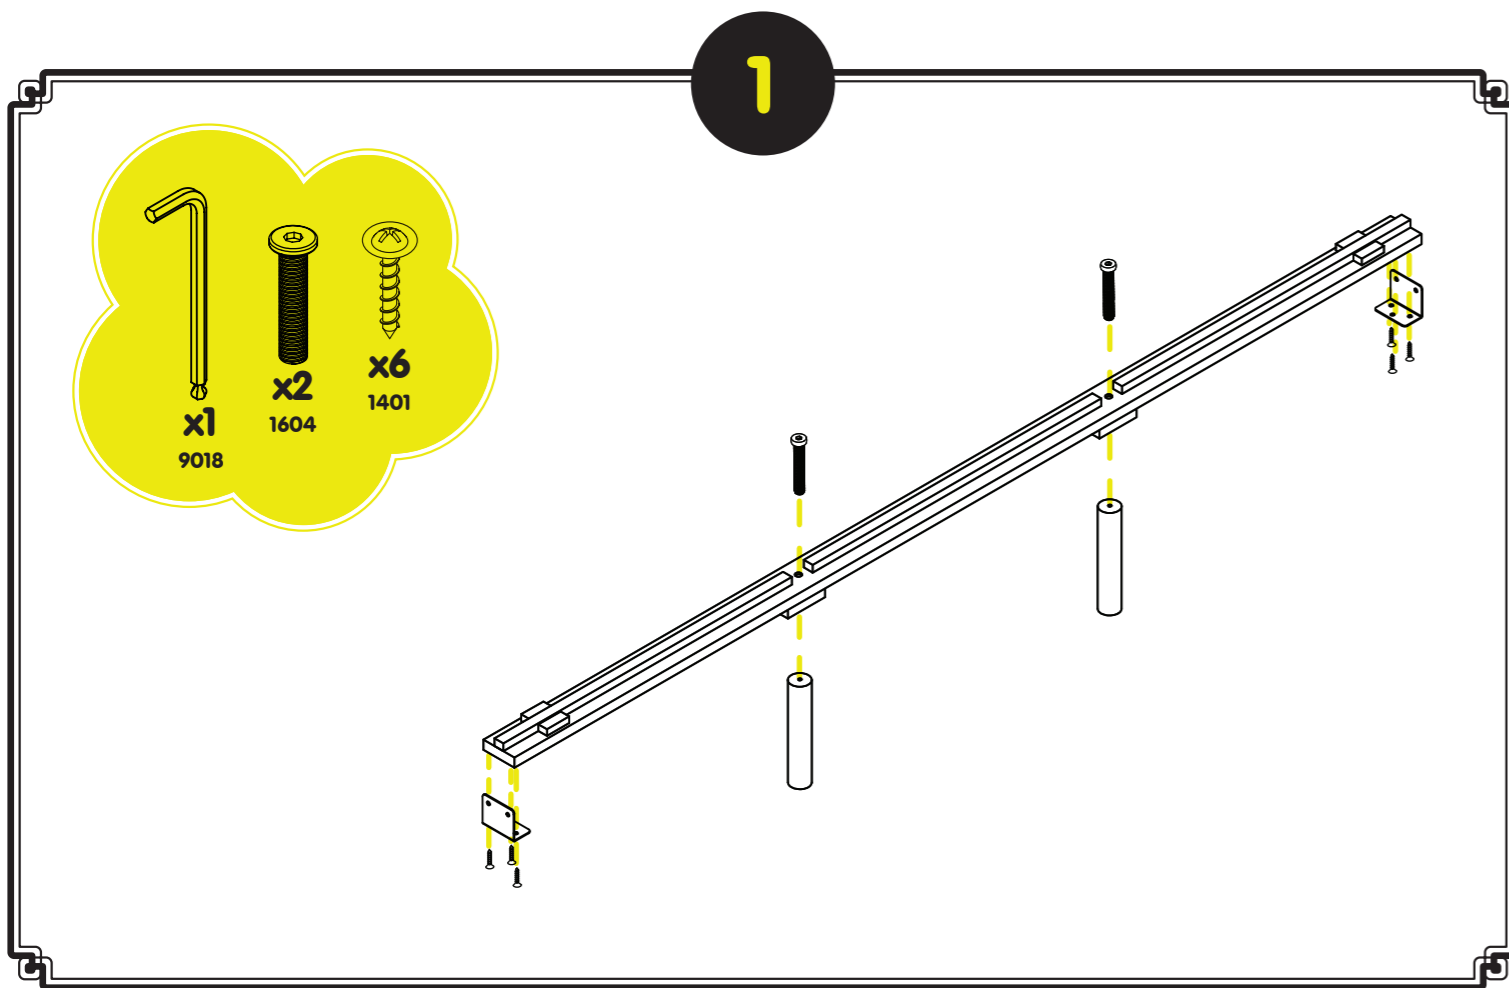


5

Starting at headboard, unroll slats along frame. Ensure first and last slat are secured by blocking.

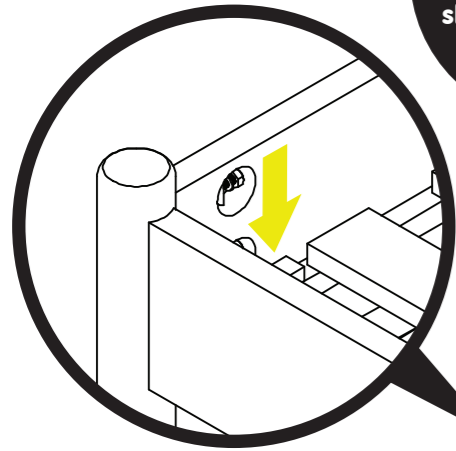

6

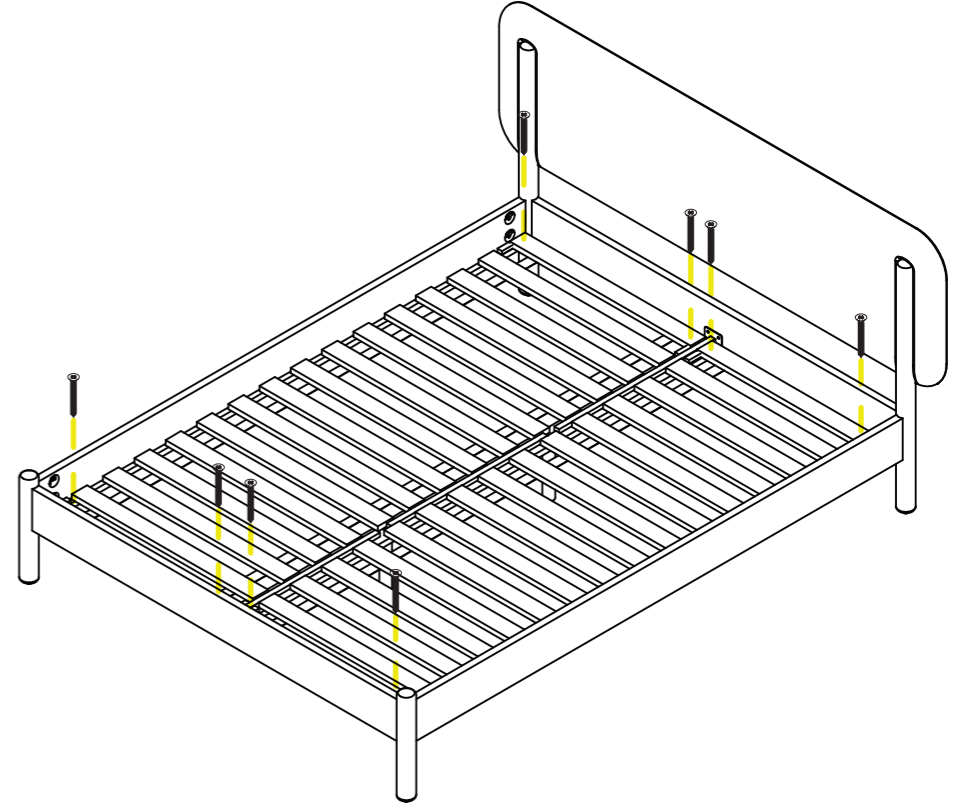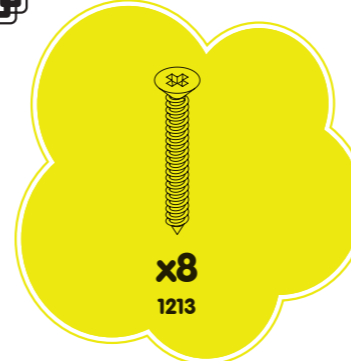

UPHOLSTERY & FELT CARE

KEEP IT CLEAN, JIMMY!

CLEAN

Vacuum your upholstery regularly.

AVOID

Keep upholstery & felt furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Spot clean with dry cleaning fluid. Do not use water or other liquids to clean, as they may stain the fabric. Consult a commercial cleaning specialist for removal of stubborn stains.