
Filter Sconce

DESIGNED IN 2021

ASSEMBLY NOTES | REV 02

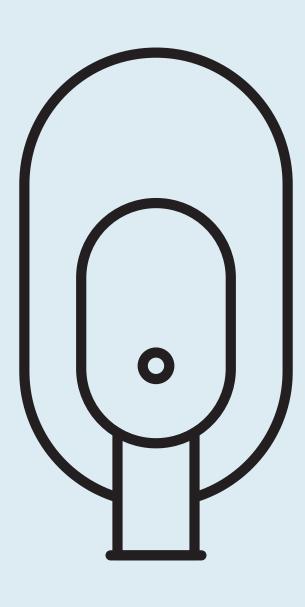




NEED A HAND?

Contact us at **service@bludot.com** or **844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

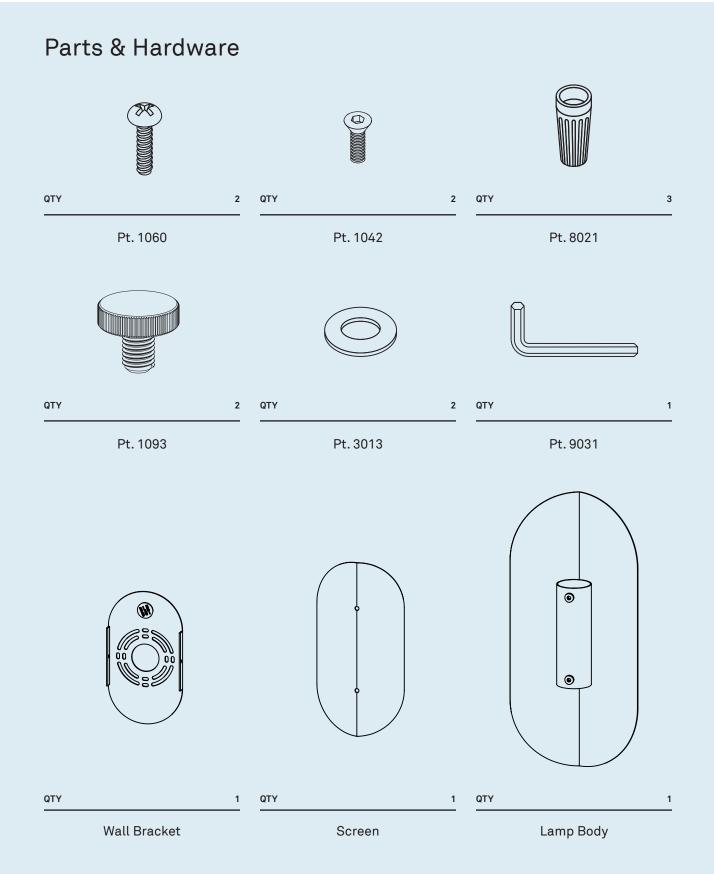

Electricity is dangerous. It is recommended to hire a professional electrician to install hard-wired fixtures.

UNASSEMBLE LAMP

The lamp ships fully assembled to protect parts during shipping. Carefully unassemble the lamp parts using the hardware as shown. Set parts aside for assembly in later steps.

0

0

Pt. 9031 x 1

00

0


0


6

ATTACH WALL BRACKET TO ELECTRICAL BOX

Disconnect power before proceeding with installation.

Attach the wall bracket to the wall electrical box as shown using the provided hardware.

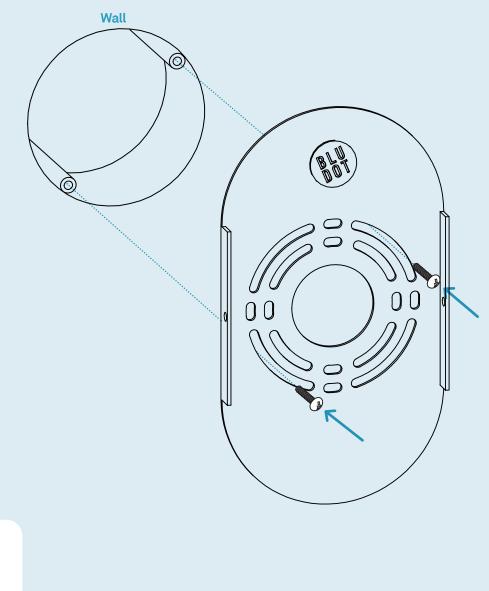



INSTALL BULBS

Insert GU10 bulbs (not included) into the lamp body and twist to lock into place as shown.

We recommend using MR16 bulbs with a flat face for ease of installation with the included suction tool.


0

JOIN ELECTRICAL WIRES

Twist grounding wires together and secure in place using wire nut.

Then twist white wires together and secure in place using wire nut.

Lastly, twist black wires together and secure in place using wire nut.

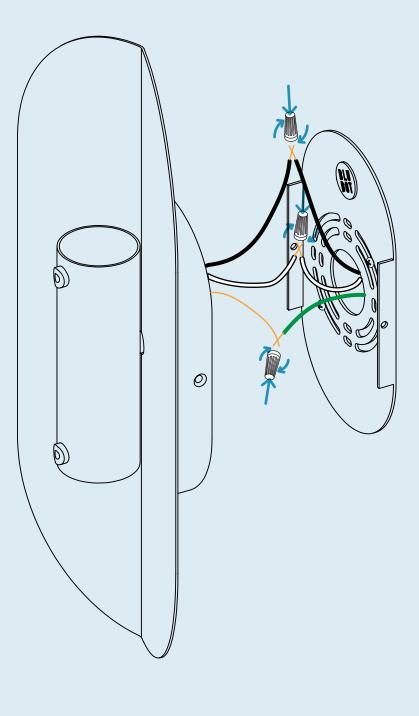





SECURE LAMP BODY TO WALL BRACKET

Tuck the wiring into the electrical box and gently position lamp body over wall bracket.

Use provided hardware to secure lamp body in place as shown.

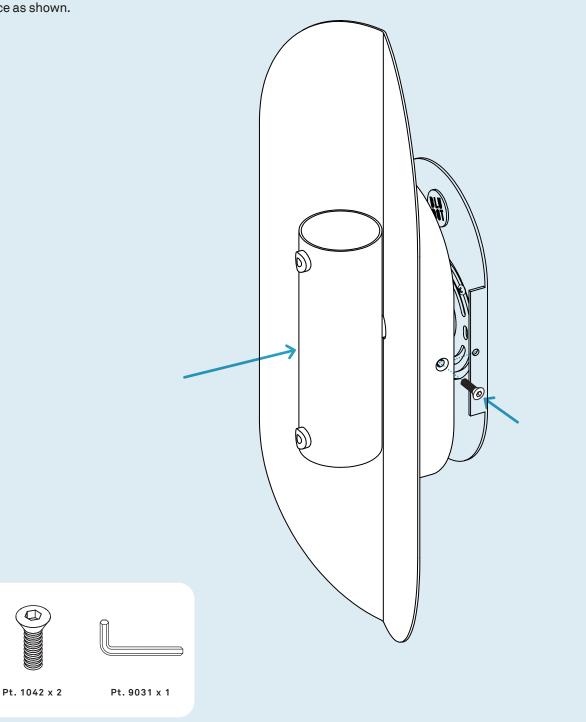

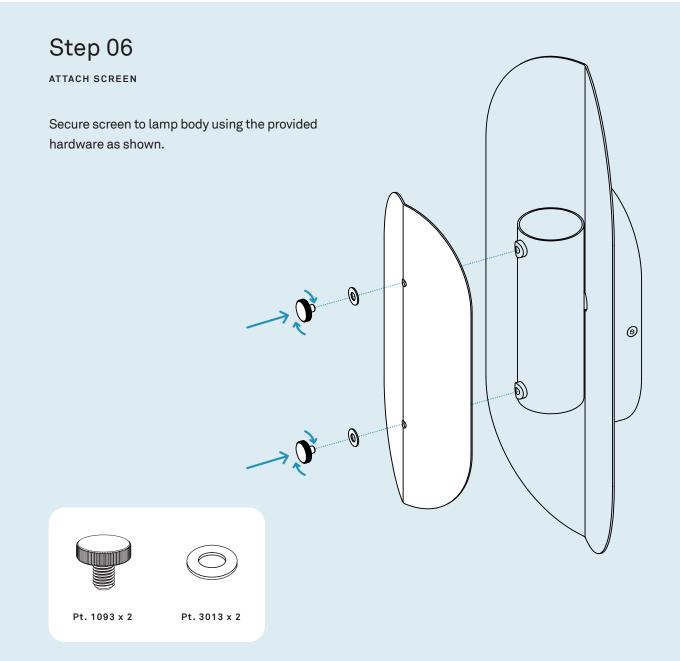

Additional Information

USE

This unit is meant for indoor use in dry locations only.

CLEAN

Clean with a dry, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for metal furniture. Wipe completely dry with a soft cloth.

