
Hitch Starter Collection

DESIGNED IN 2013

ASSEMBLY NOTES | REV 02

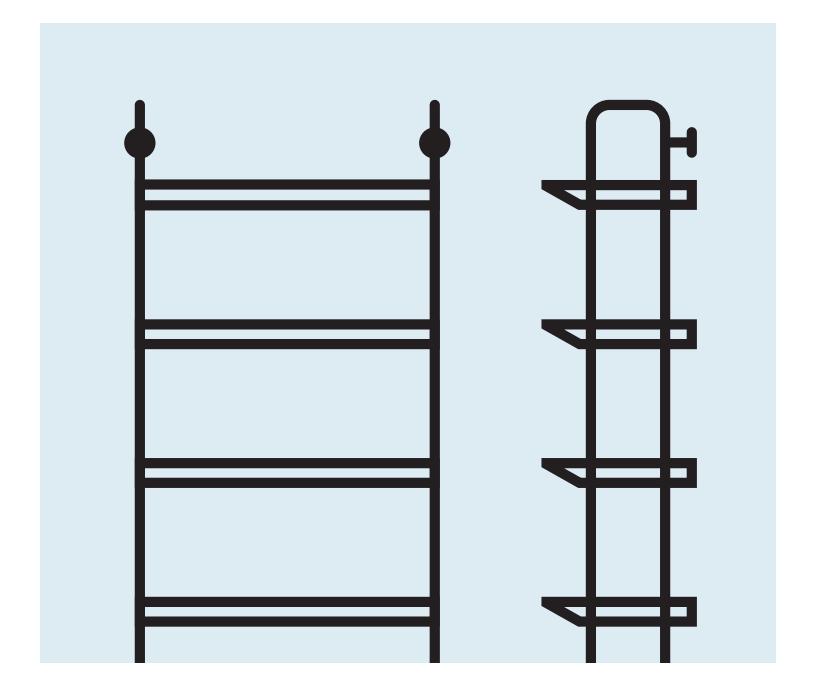




ABOUT TIME YOUR WALLS GOT HITCHED.

NEED A HAND?

Powder coated uprights and wood shelves make you the master of your own book case destiny. Single units stand alone. Gang up multiples to create mass appeal.

Contact us at **service@bludot.com** or **844.425.8368** for assistance.


Parts & Hardware

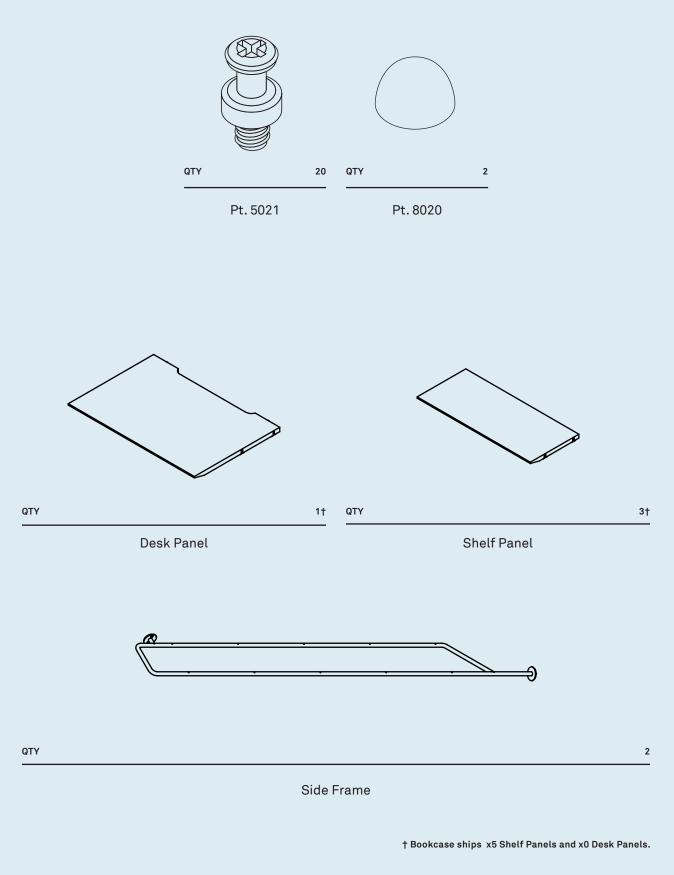

Step 01

ASSEMBLING THE SIDE FRAMES.


Using a phillips head screwdriver, attach hardware to side frame as shown. Repeat for remaining side frame.

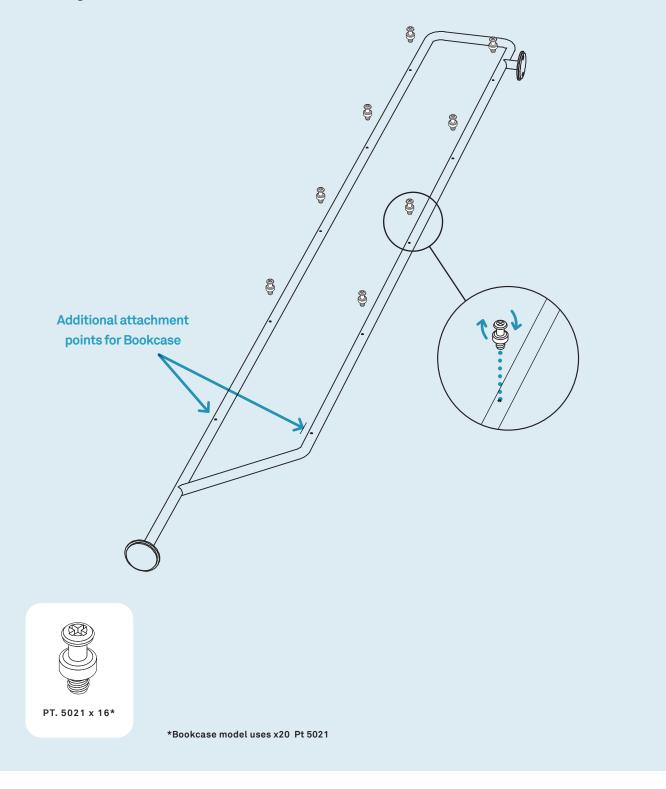

Step 02

ATTACHING THE SHELVES.

Place the side frames on a soft surface as shown. Align the pre-attached shelf hardware with PT. 5021. Slide down shelves and tighten the shelf hardware as shown. Repeat for the remaining shelves.

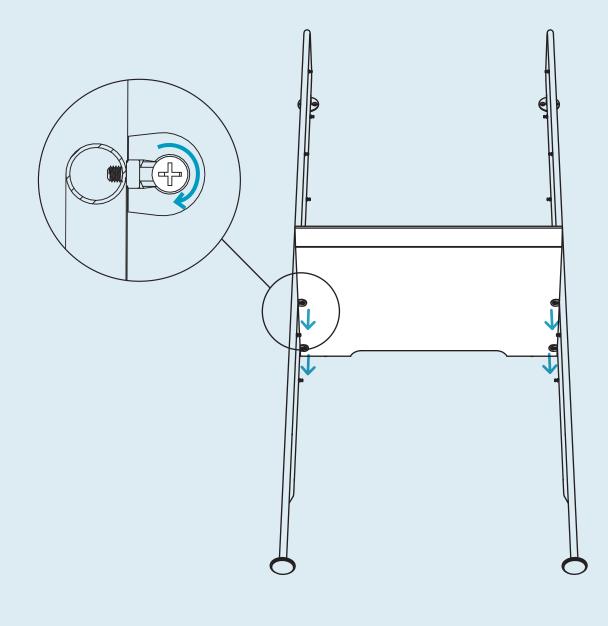


Step 03

ATTACHING TO A WALL.

Attach Pt 8020 to the bottom shelf as shown. Use a pencil and the pre-attached brackets to mark the attachment hardware locations. Use the hardware best suited to your particular wall to secure the product.

NOTE: Wall attachment hardware is not provided. We recommend consulting your local hardware professional for the attachment hardware best suited to your particular wall.

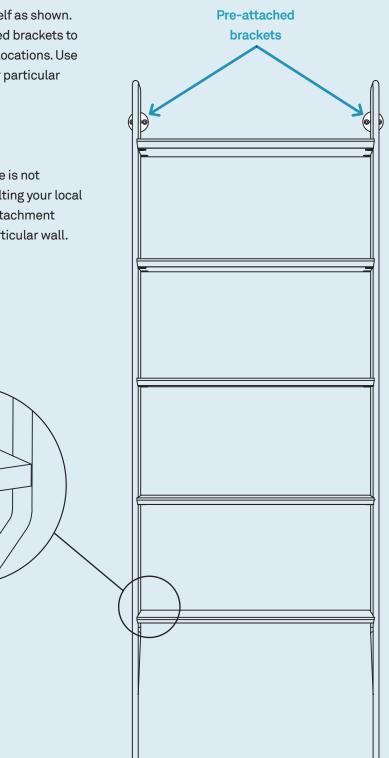


PT. 8020 x 2

Attach Desk Brackets

Note: This additional step only applies to models that come with a desk panel. Complete shelf assembly as shown in the assembly instructions booklet before proceeding.

Attach the Desk Brackets to the bottom of the desk panel using the provided hardware as shown.

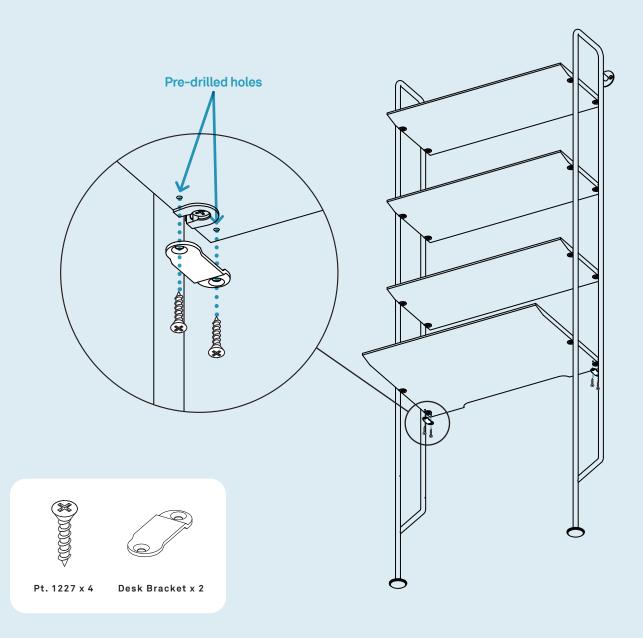

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

