



Keeps Table Collection

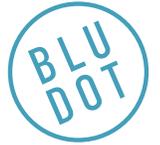

DESIGNED IN 2019

ASSEMBLY NOTES | REV 01

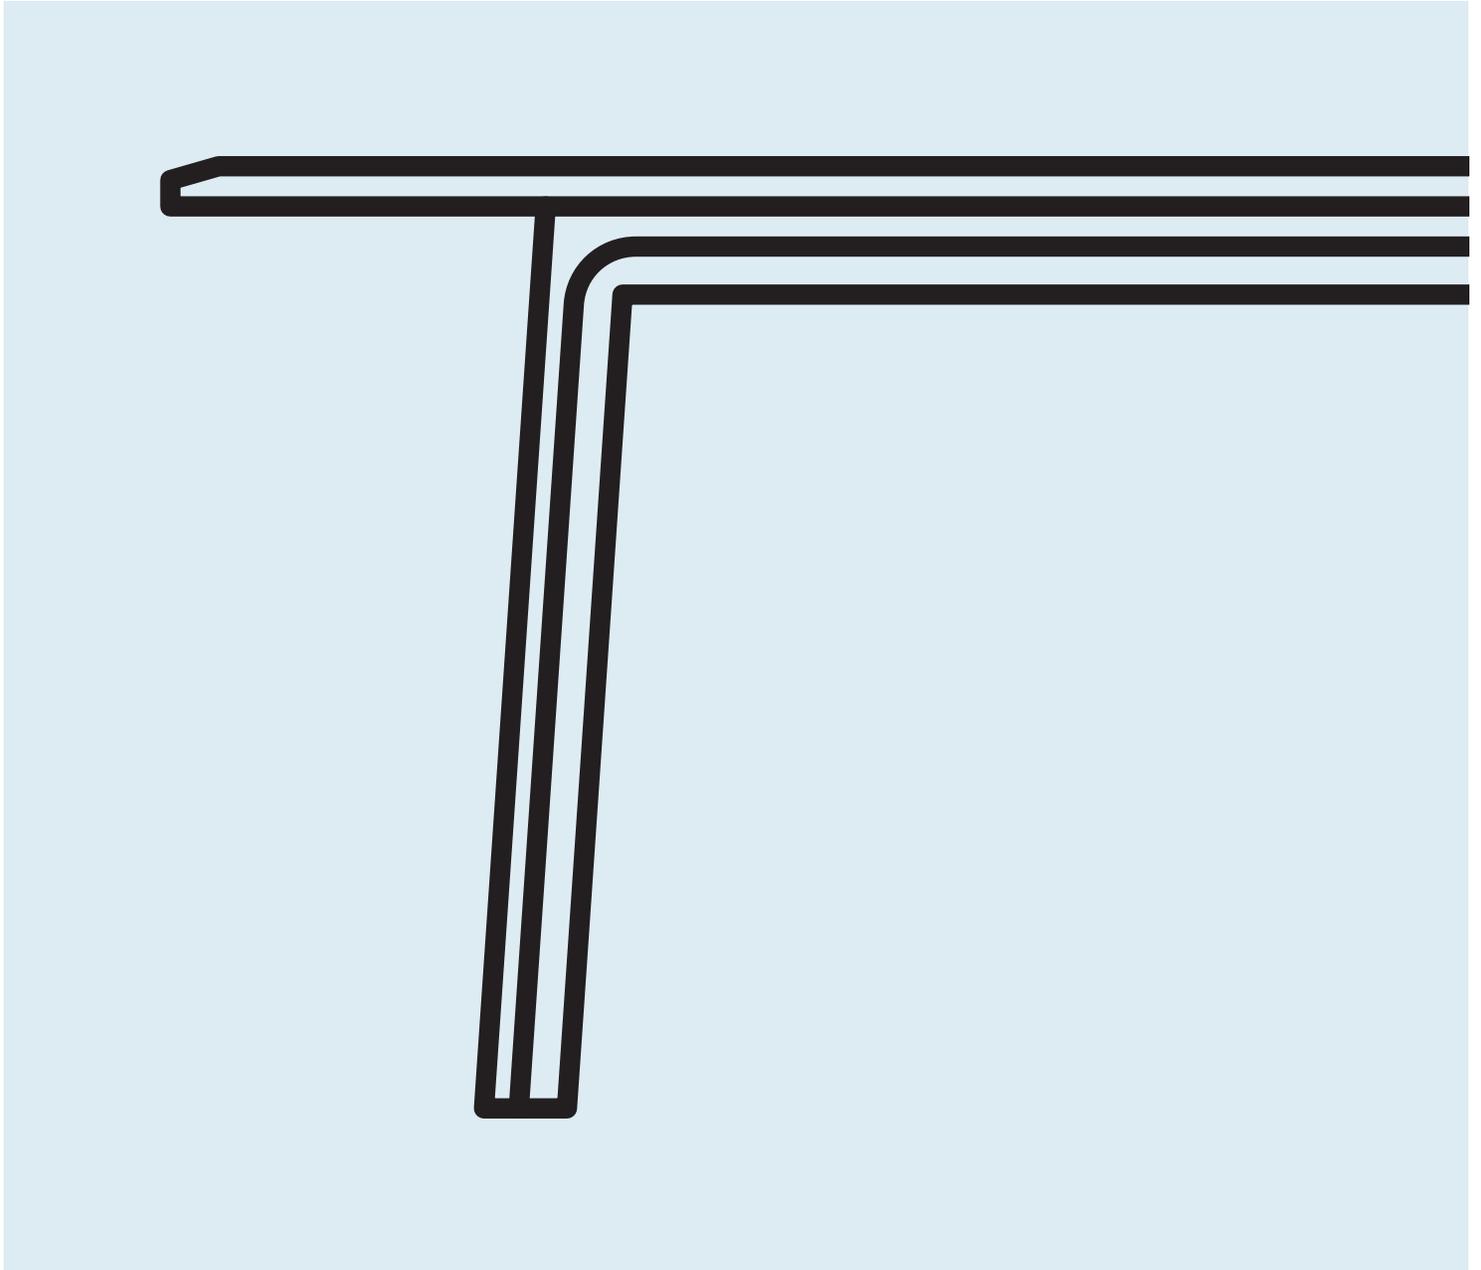

NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware



QTY 12

Pt. 1057



QTY 9 | 6*

Pt. 1104




QTY 12 | 8*

Pt. 5014



QTY 6 | 4*

Pt. 5018




QTY 21 | 18*

Pt. 3002




QTY 6 | 4*

Pt. 5019

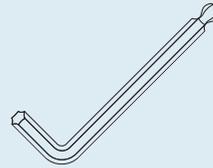


QTY 1

Pt. 9016

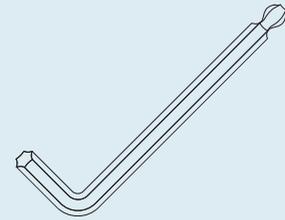


QTY 1

Pt. 9023

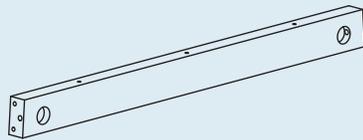


QTY 3 | 2*

Support Rail




QTY 4

Metal Bracket

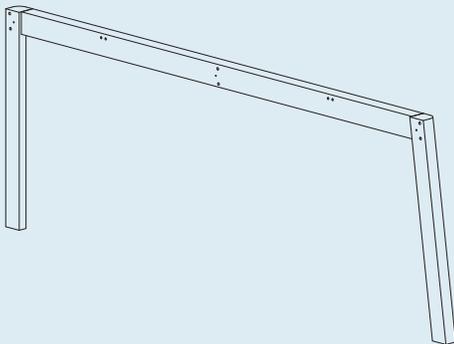

QTY 2

Leg Frame

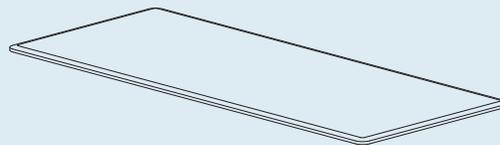

QTY 1


Top Panel

Hardware and part quantities listed for 100" table. The 76" Table ships with quantities called out with an *

Step 01

ATTACHING SUPPORT RAILS.


Place the top panel face down on a soft surface. Align x2 support rails with threaded inserts on the top panel. Partially tighten Pt. 1104.

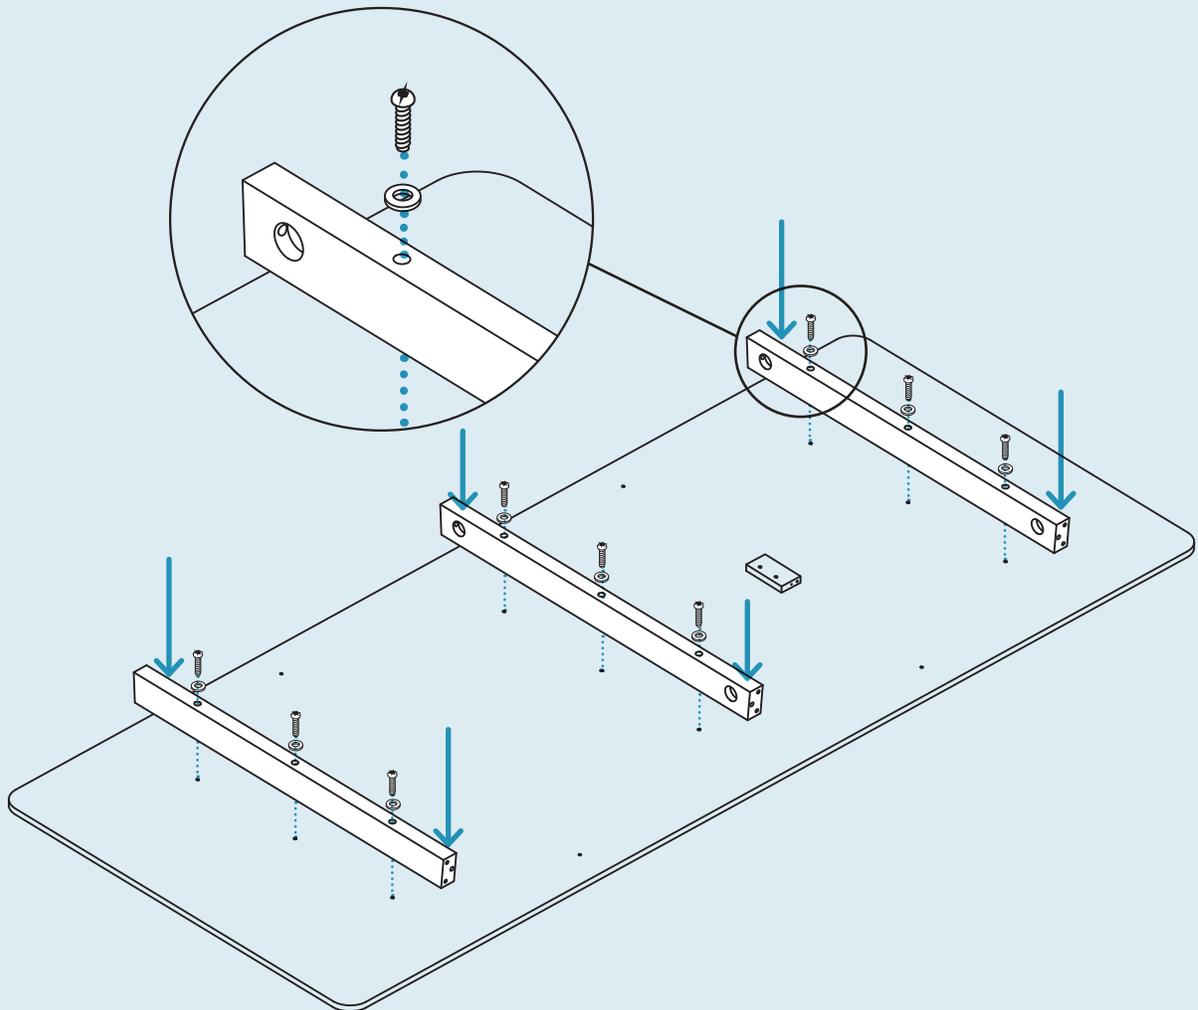

PT. 1104 x 9 | 6*



PT. 3002 x 9 | 6*

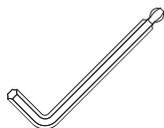


PT. 9016 x 1

Hardware and part quantities listed for 100" table. The 76" Table ships with quantities called out with an *

Step 02

PREPARING THE SUPPORT RAILS.

Align the arrow on Pt. 5019 parallel to the top panel and facing towards the outer edge of the support rail. Press Pt. 5019 into the pre-drilled holes on the support rails.

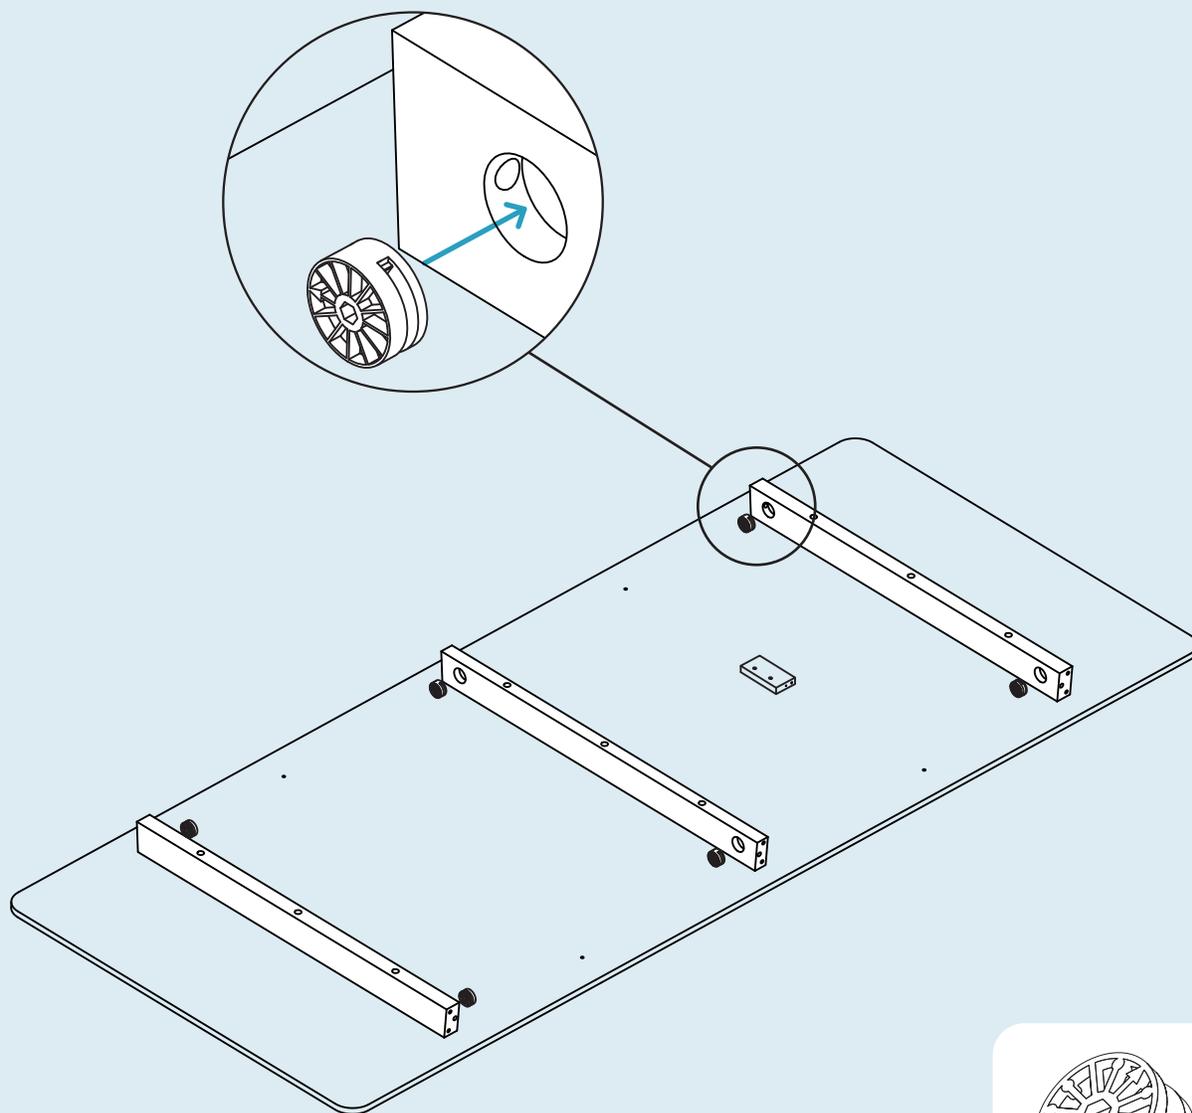



PT. 5019 x 6 | 4*

Hardware and part quantities listed for 100" table. The 76" Table ships with quantities called out with an *

Step 03

ATTACHING THE LEG FRAMES.

Place the leg frames on a soft surface. Using a screwdriver install Pt. 5018 as shown. Install Pt. 5014 and align the pre-drilled holes on the leg frames with Pt. 5014.

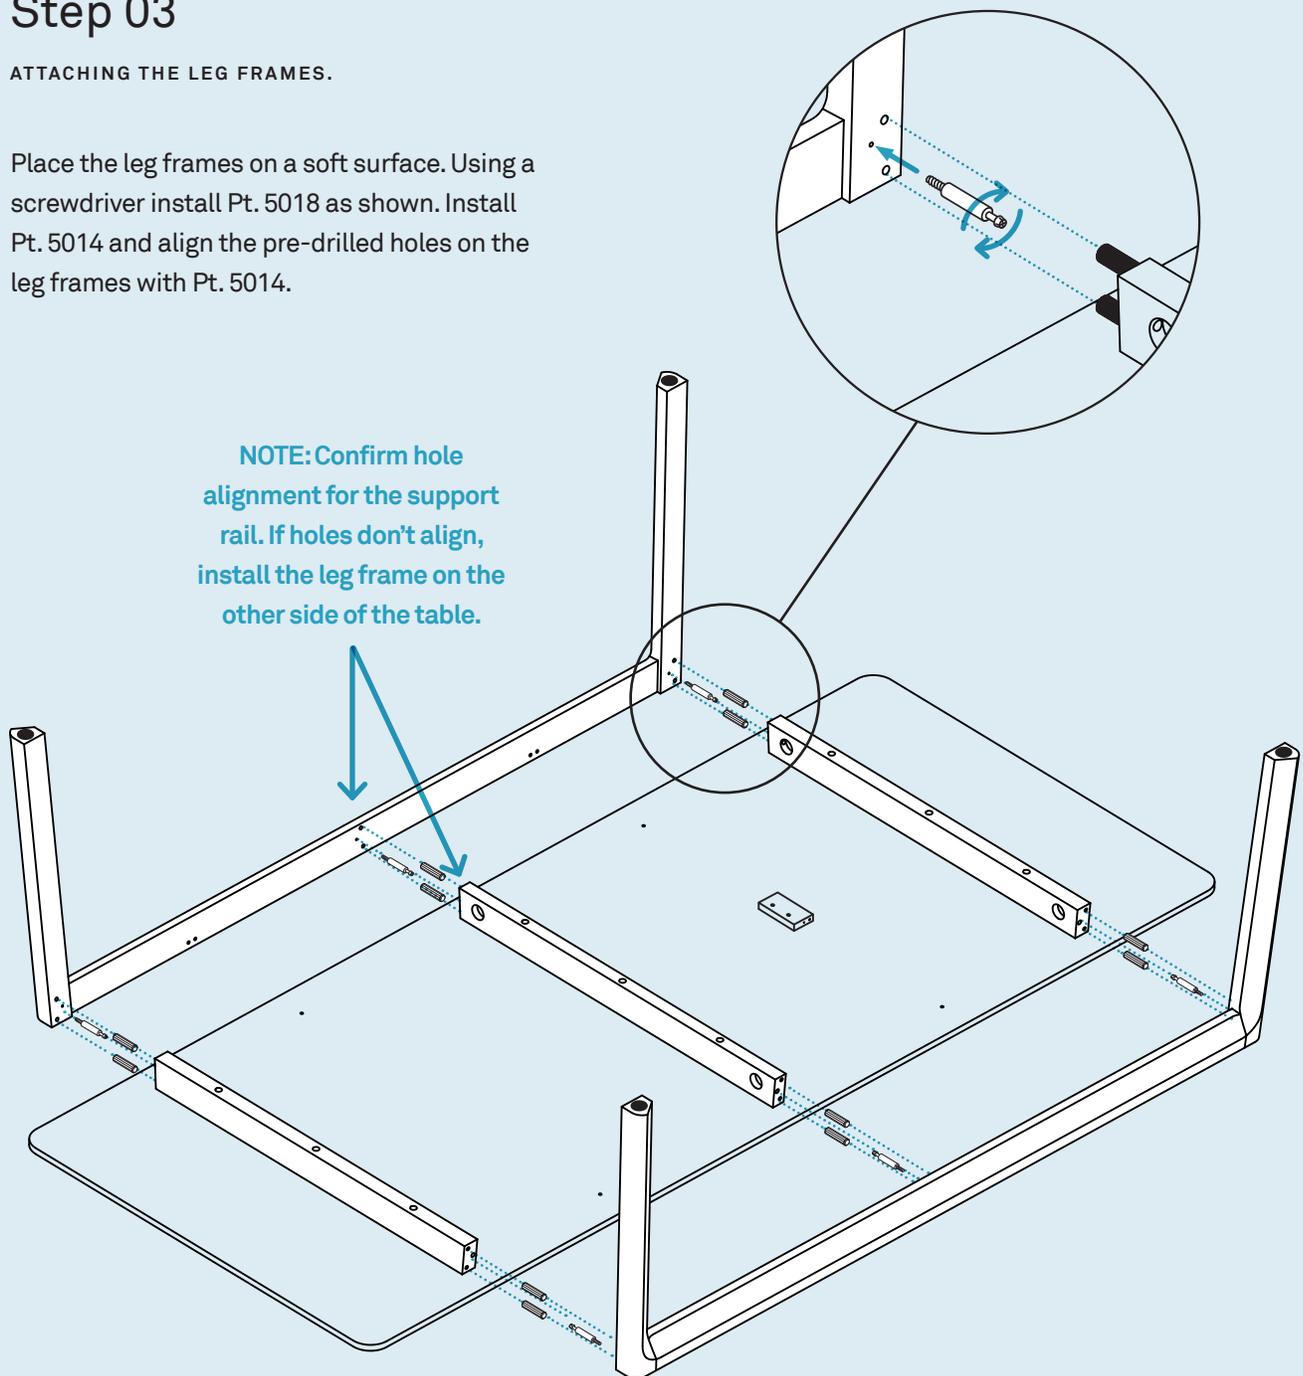


PT. 5014 x 12 | 8* PT. 5018 x 6 | 4* PT. 9016 x 1

Hardware and part quantities listed for 100" table. The 76" Table ships with quantities called out with an *

Step 04

SECURING THE LEG FRAMES.

Using Pt. 9023 turn the hardware clockwise until secured. After securing the leg frames, center the base assembly on the top panel by sliding as shown.

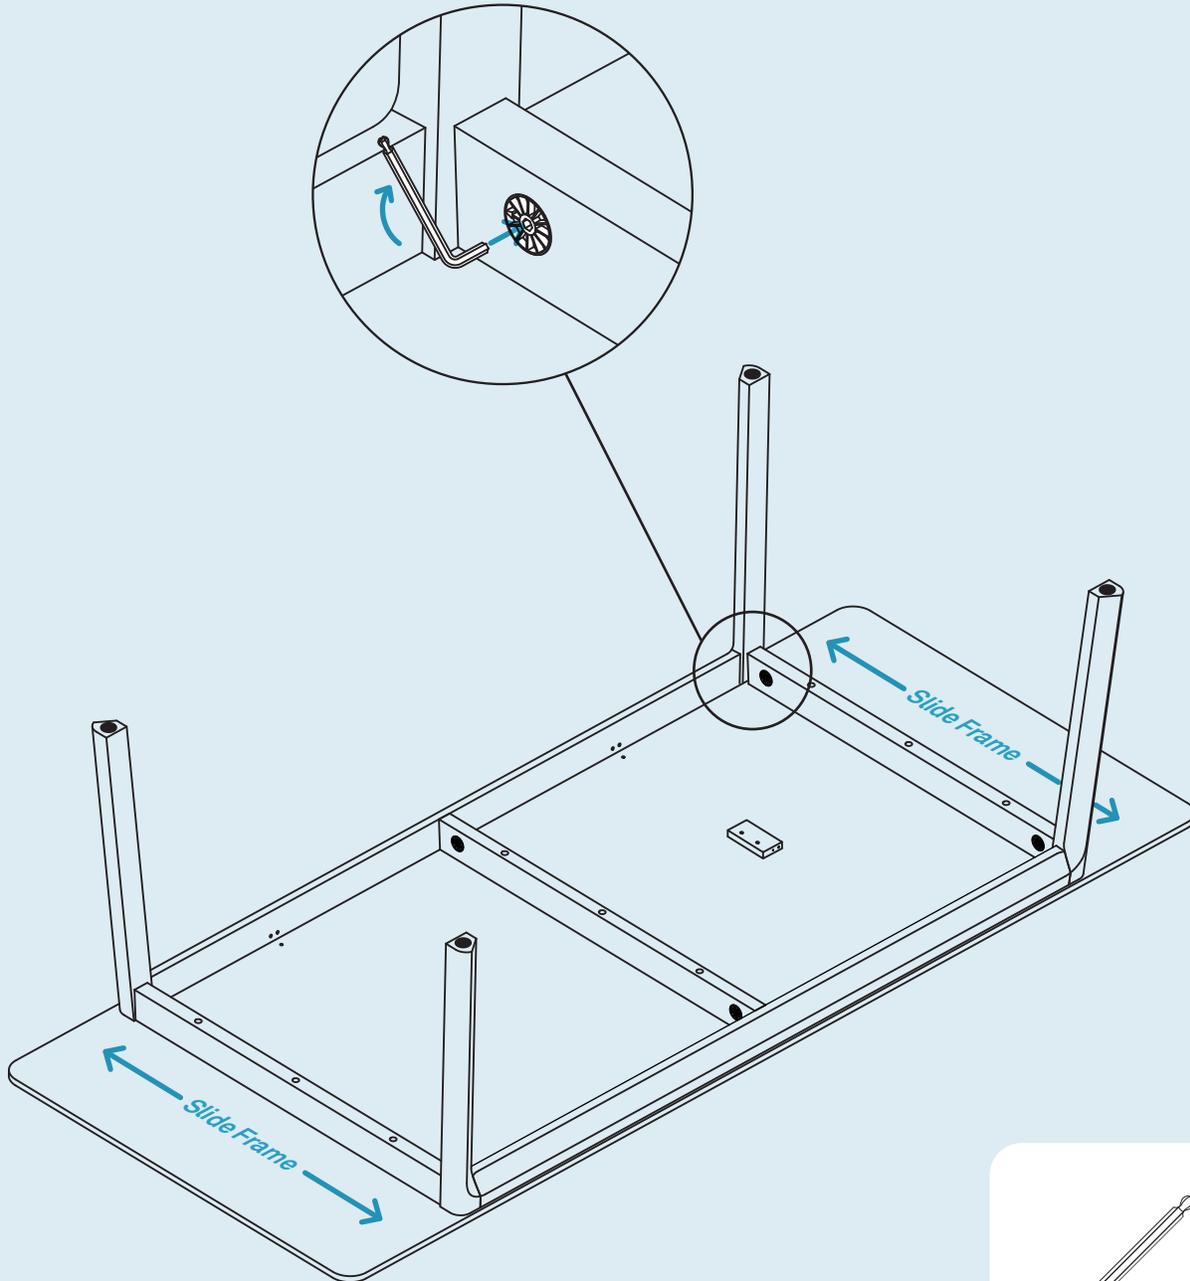


PT. 9023 x 1


Step 05

INSTALLING THE METAL BRACKETS.

Begin installing the metal brackets to the leg frames as shown. Complete installation by securing the metal brackets to the top panel.

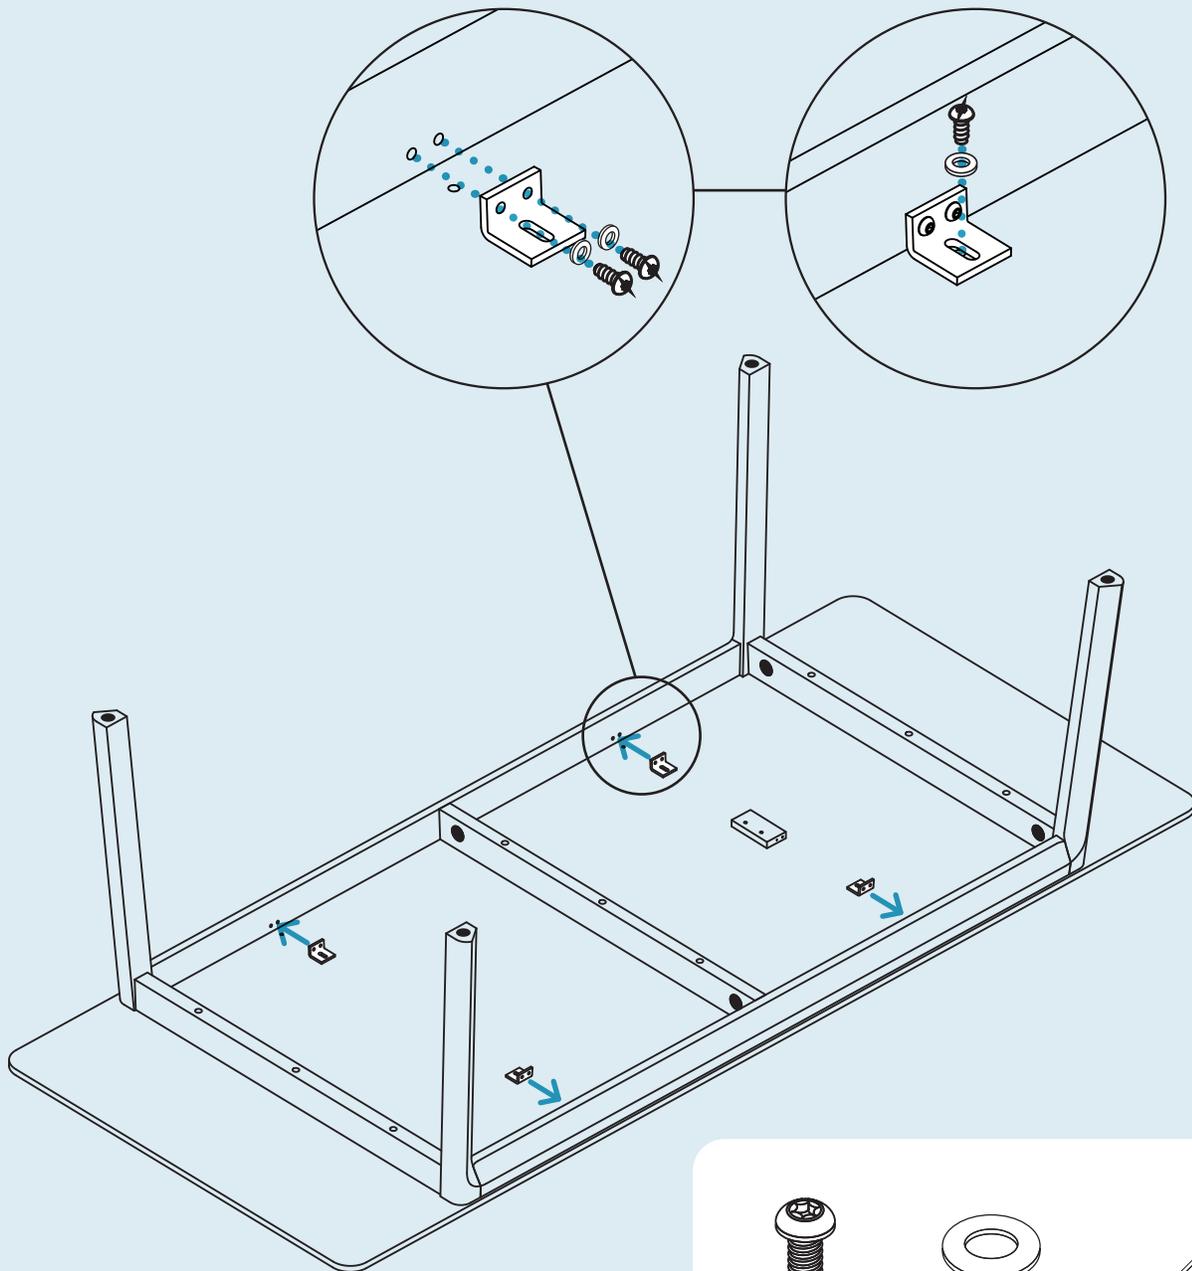

PT. 1057 x 12



PT. 3002 x 12




PT. 9016 x 1

Step 06

FINISH TIGHTENING THE SUPPORT RAILS.

Finish tightening Pt. 1104 before first use.
Store Pt. 9016 and Pt. 9023 in the provided storage cradle. Periodically use the provided hardware to tighten connections.

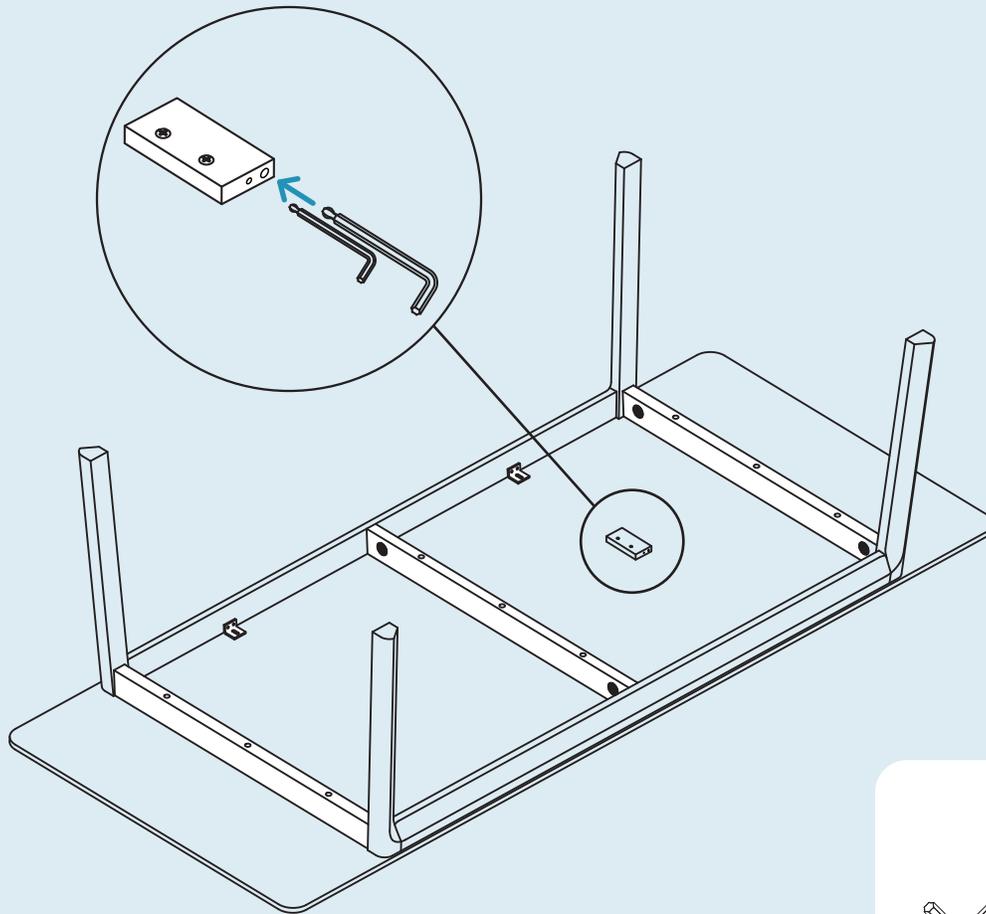

PT. 9023 x 1

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

