
Open Plan Bench

DESIGNED IN 2020

ASSEMBLY NOTES | REV 00

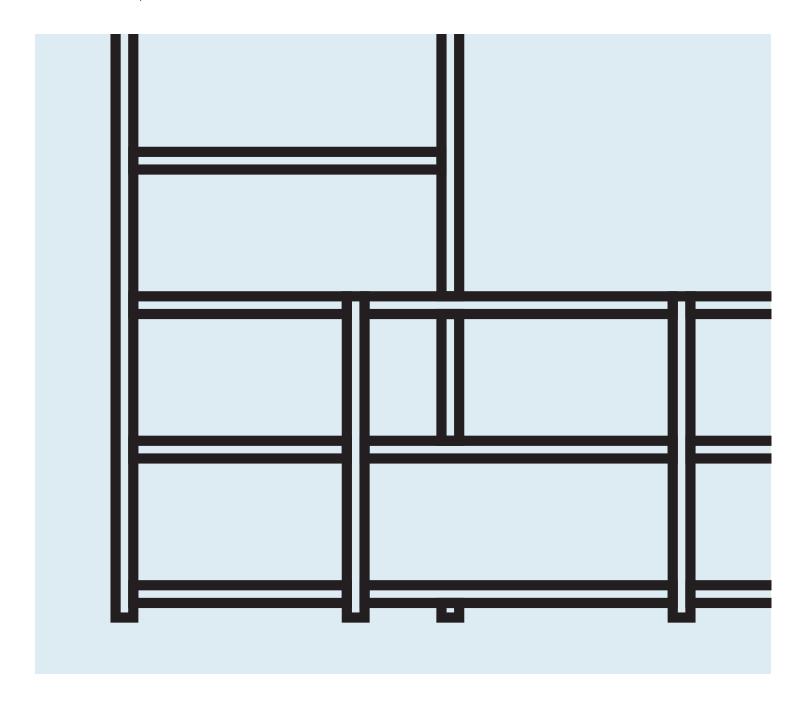




NEED A HAND?

Contact us at **service@bludot.com** or **844.425.8368** for assistance.

@BLUDOT


We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

Parts & Hardware

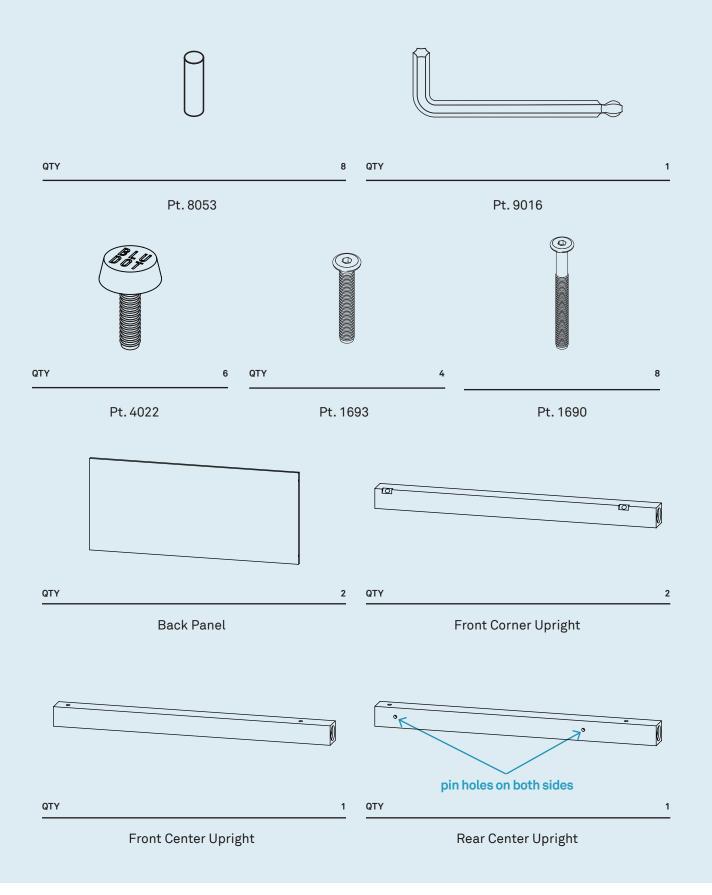

1 | 844.425.8368 OPEN PLAN BENCH

Parts & Hardware

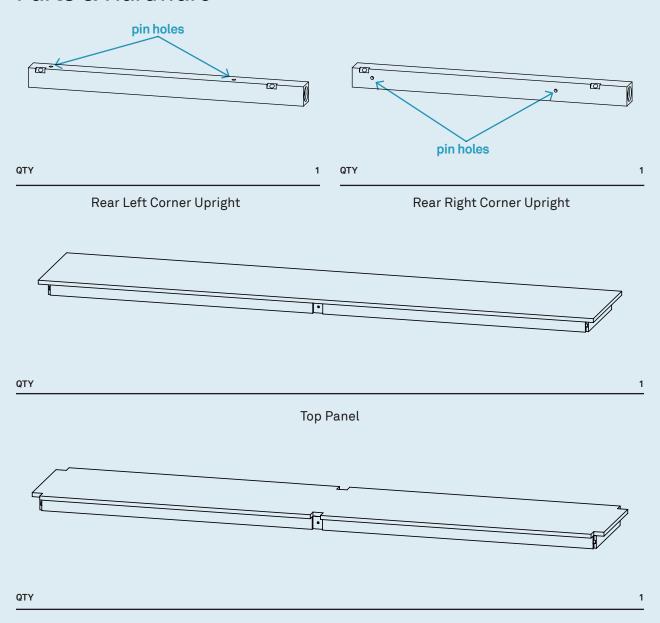


Bottom Panel

ASSEMBLY NOTES SERVICE@BLUDOT.COM | 2

ATTACH PANELS TO FRONT UPRIGHTS.

Attach the panels to the front uprights using the provided hardware as shown.


Note that front uprights do not have pin holes.

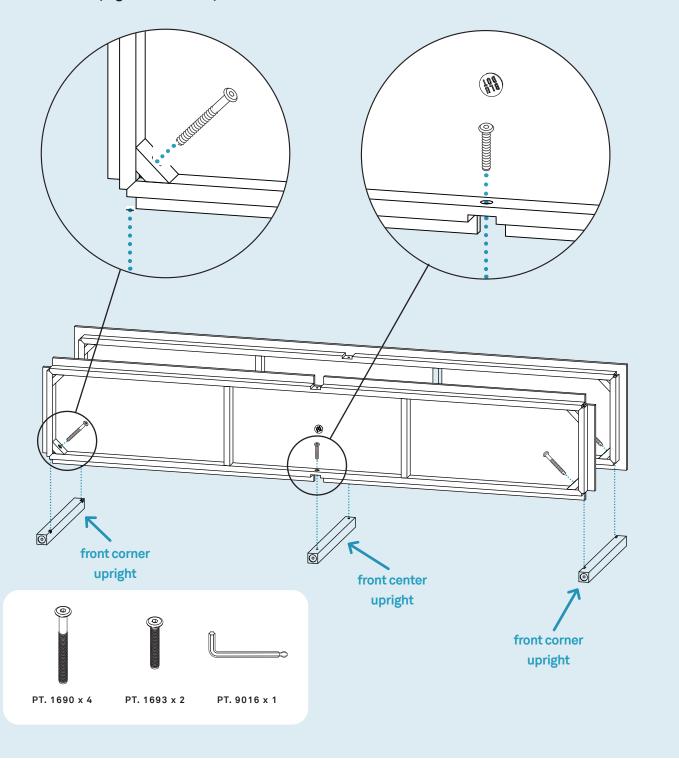

3 | 844.425.8368 OPEN PLAN BENCH

ATTACH REAR CENTER UPRIGHT.

Attach the rear center upright to the panels using the provided hardware as shown.

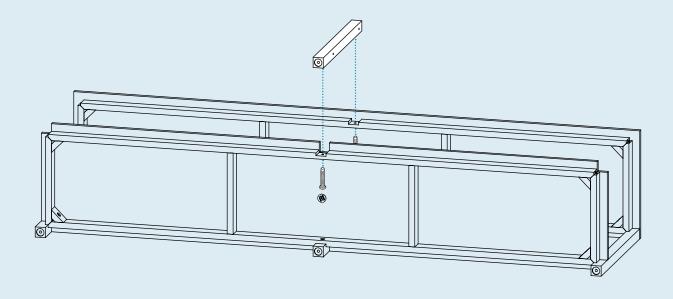




ASSEMBLY NOTES SERVICE@BLUDOT.COM | 4

ATTACH BACK PANELS TO REAR CENTER UPRIGHT.


Place metal pins in the center rear upright and align with back panel pieces as shown.

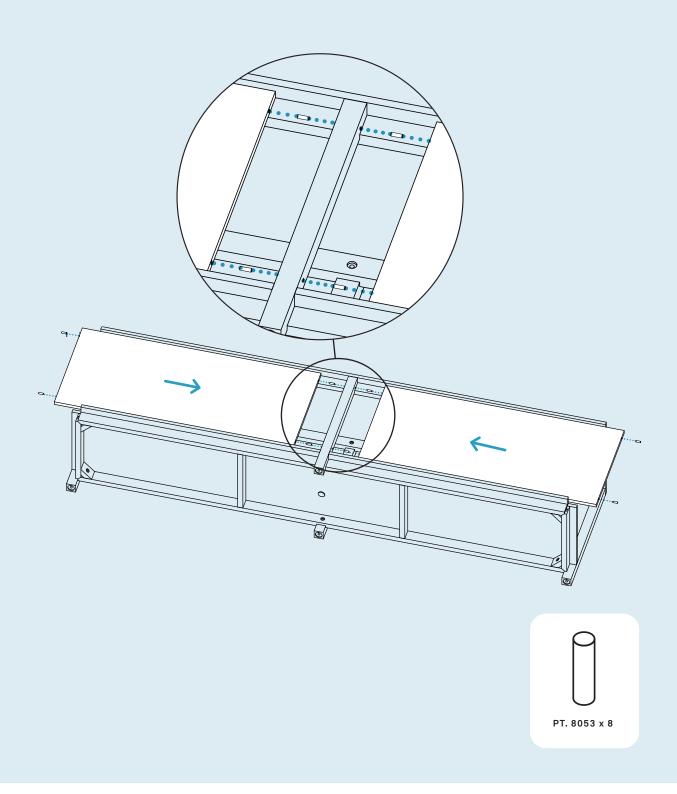


5 | 844.425.8368 OPEN PLAN BENCH

ATTACH REMAINING UPRIGHTS.

Attach the remaining rear corner uprights using the provided hardware as shown. Ensure that the back panel pins align with the uprights.

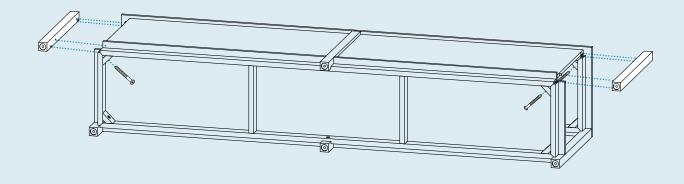


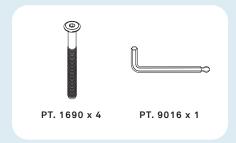

ASSEMBLY NOTES SERVICE@BLUDOT.COM | 6

INSTALL ADJUSTABLE GLIDES.

Install adjustable glides to the bottom of the uprights as shown. Ensure that the uprights are level prior to using the product.

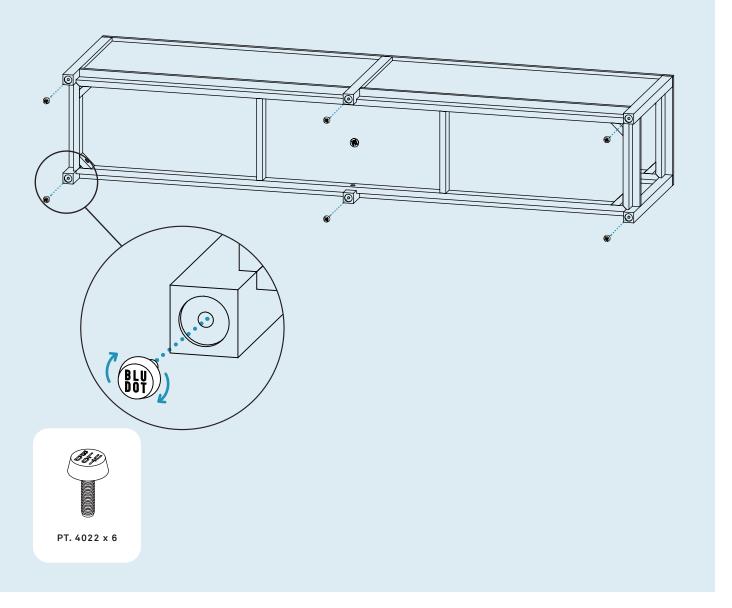

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

