



REAL GOOD CHAIR

ASSEMBLY NOTES

WHEN GOOD JUST WON'T DO!

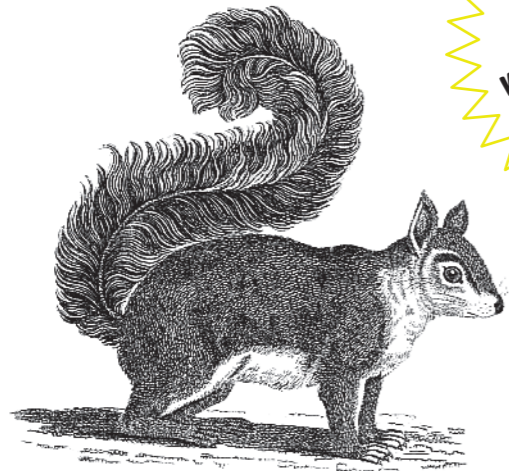


HARDWARE



x4
3001




x4
8033

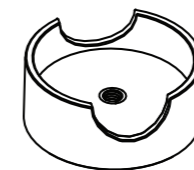


x4
8032




x4
2005



x4
1072

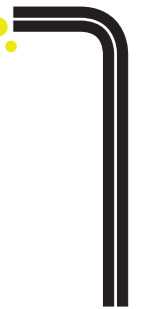


x1
9013




x1
9012

PARTS


x1

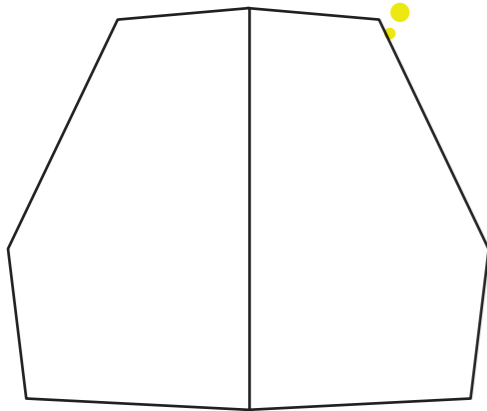


x1




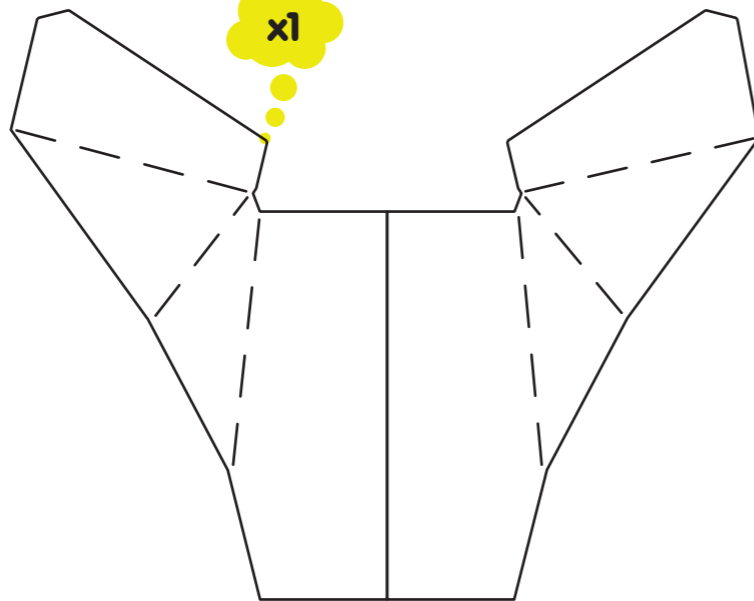


x1


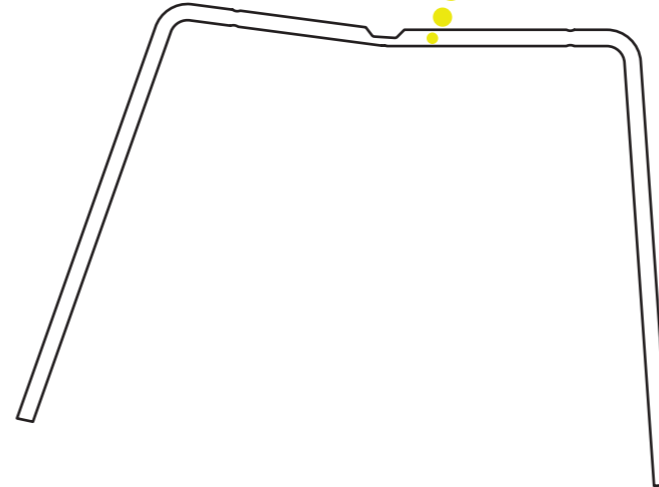


x1

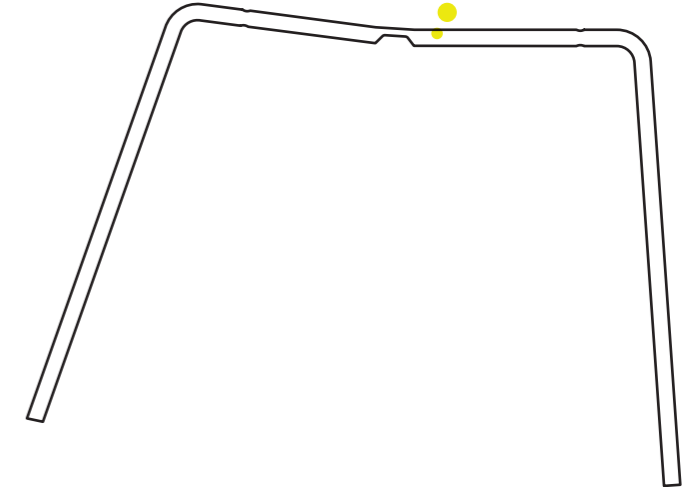

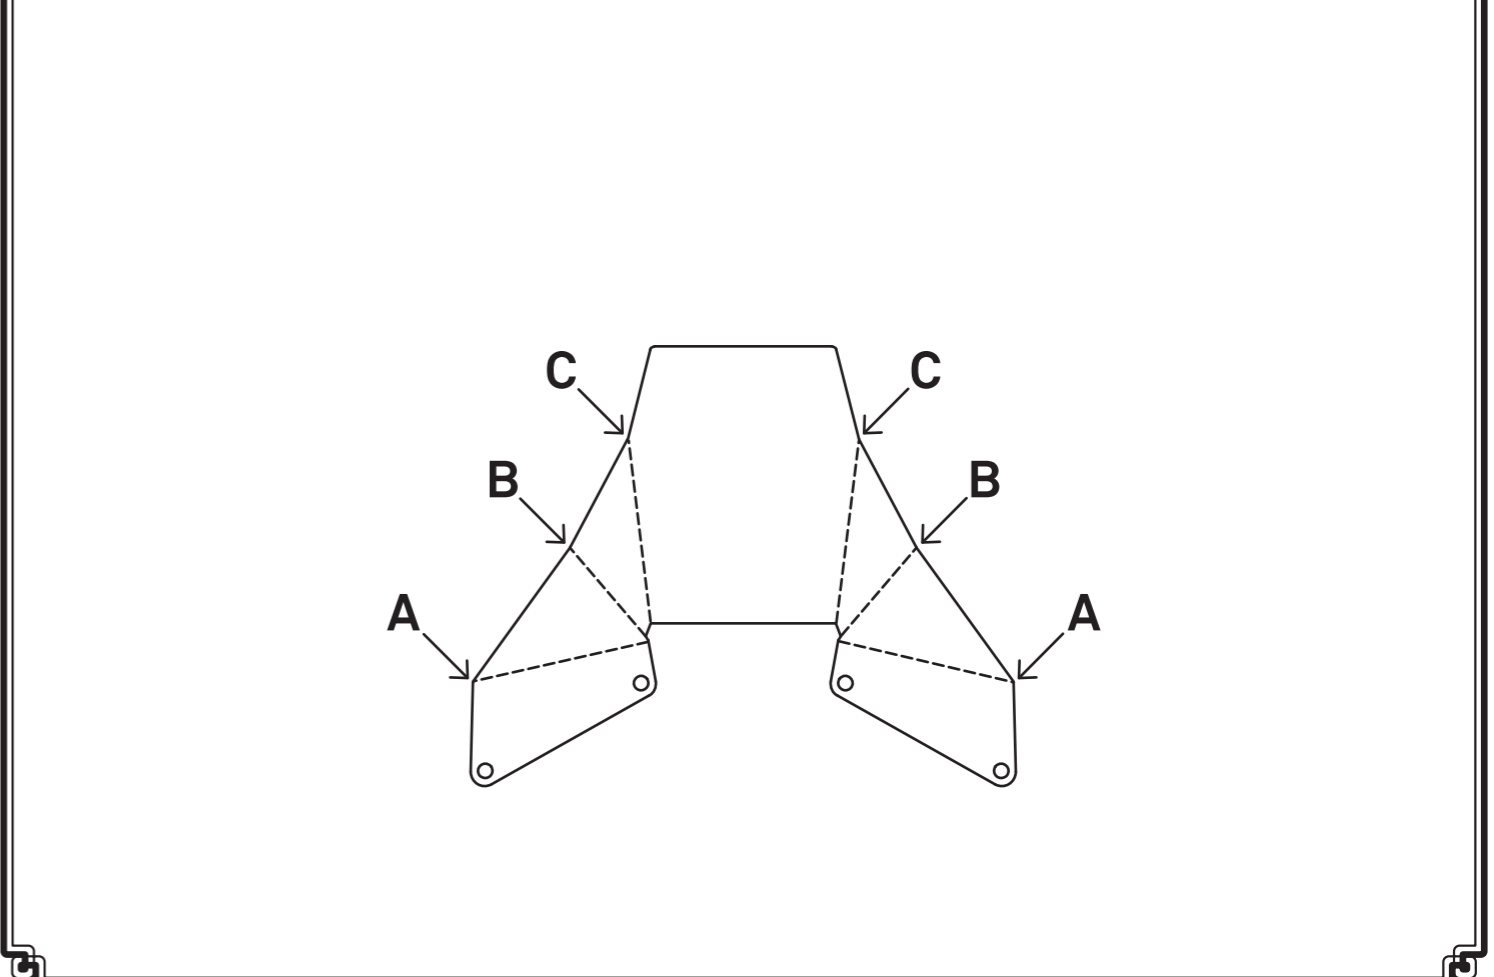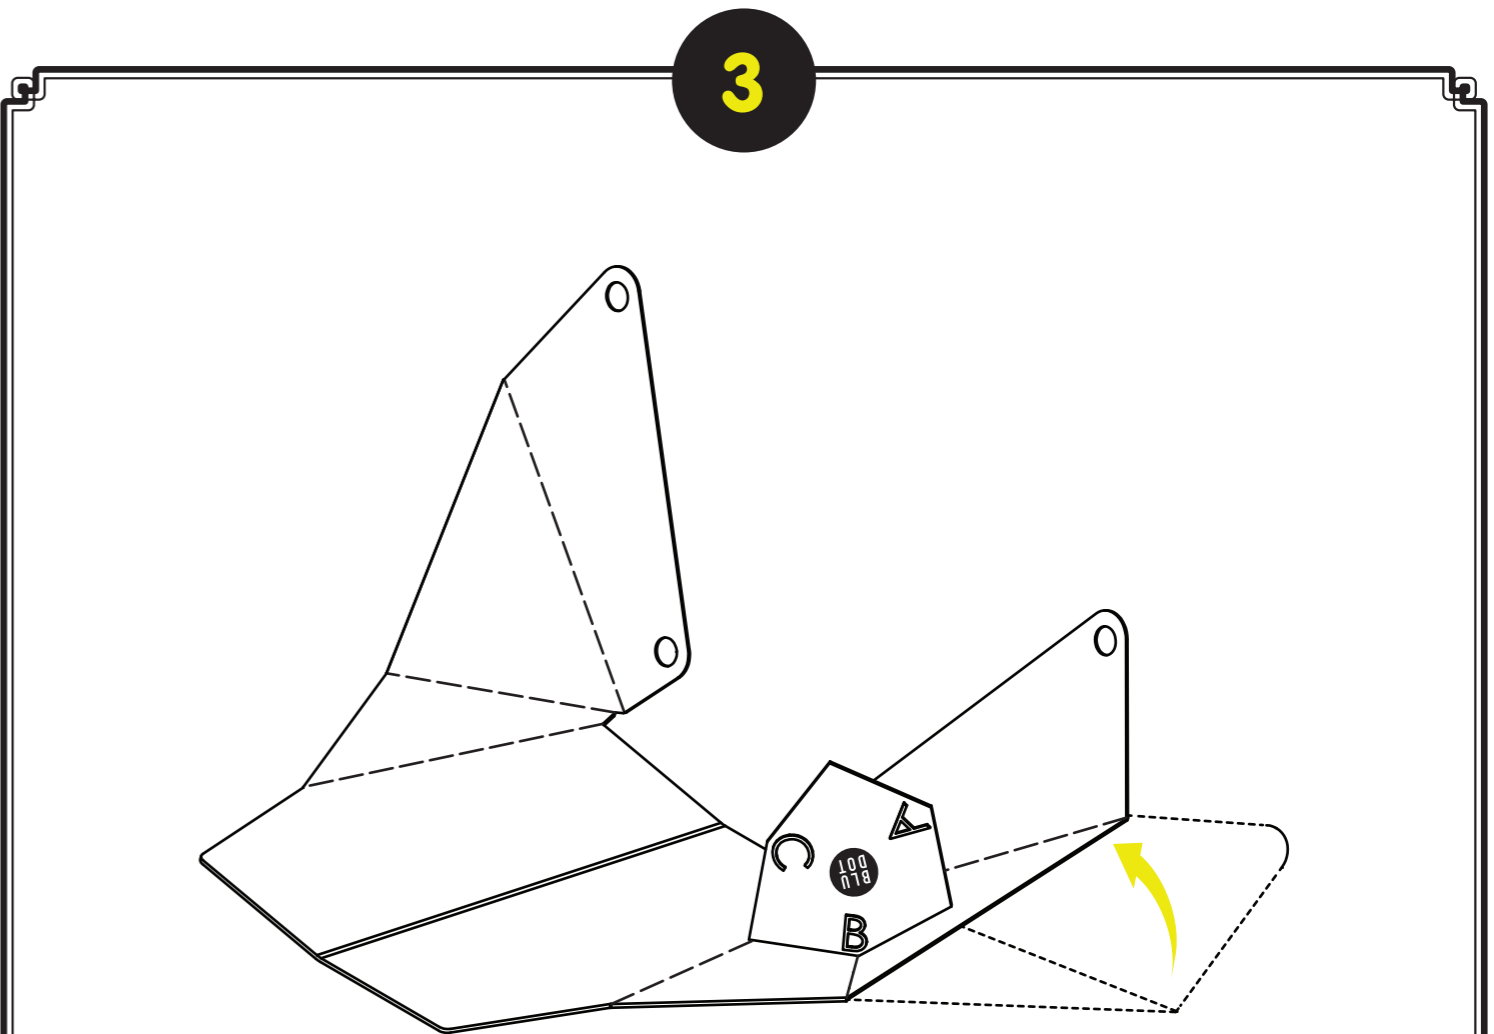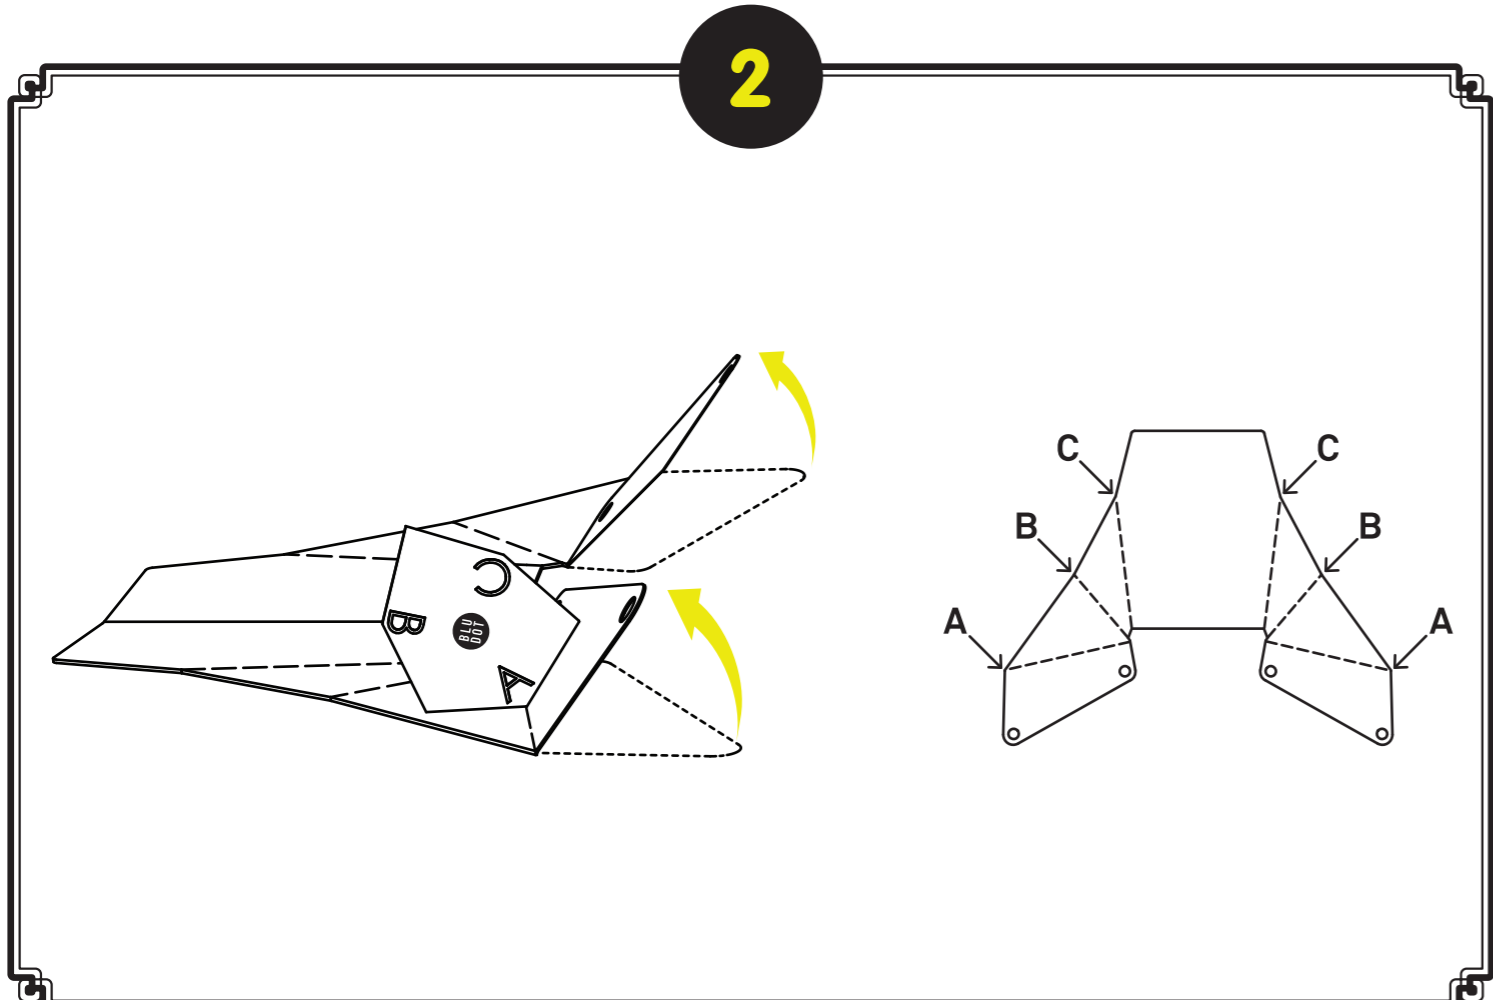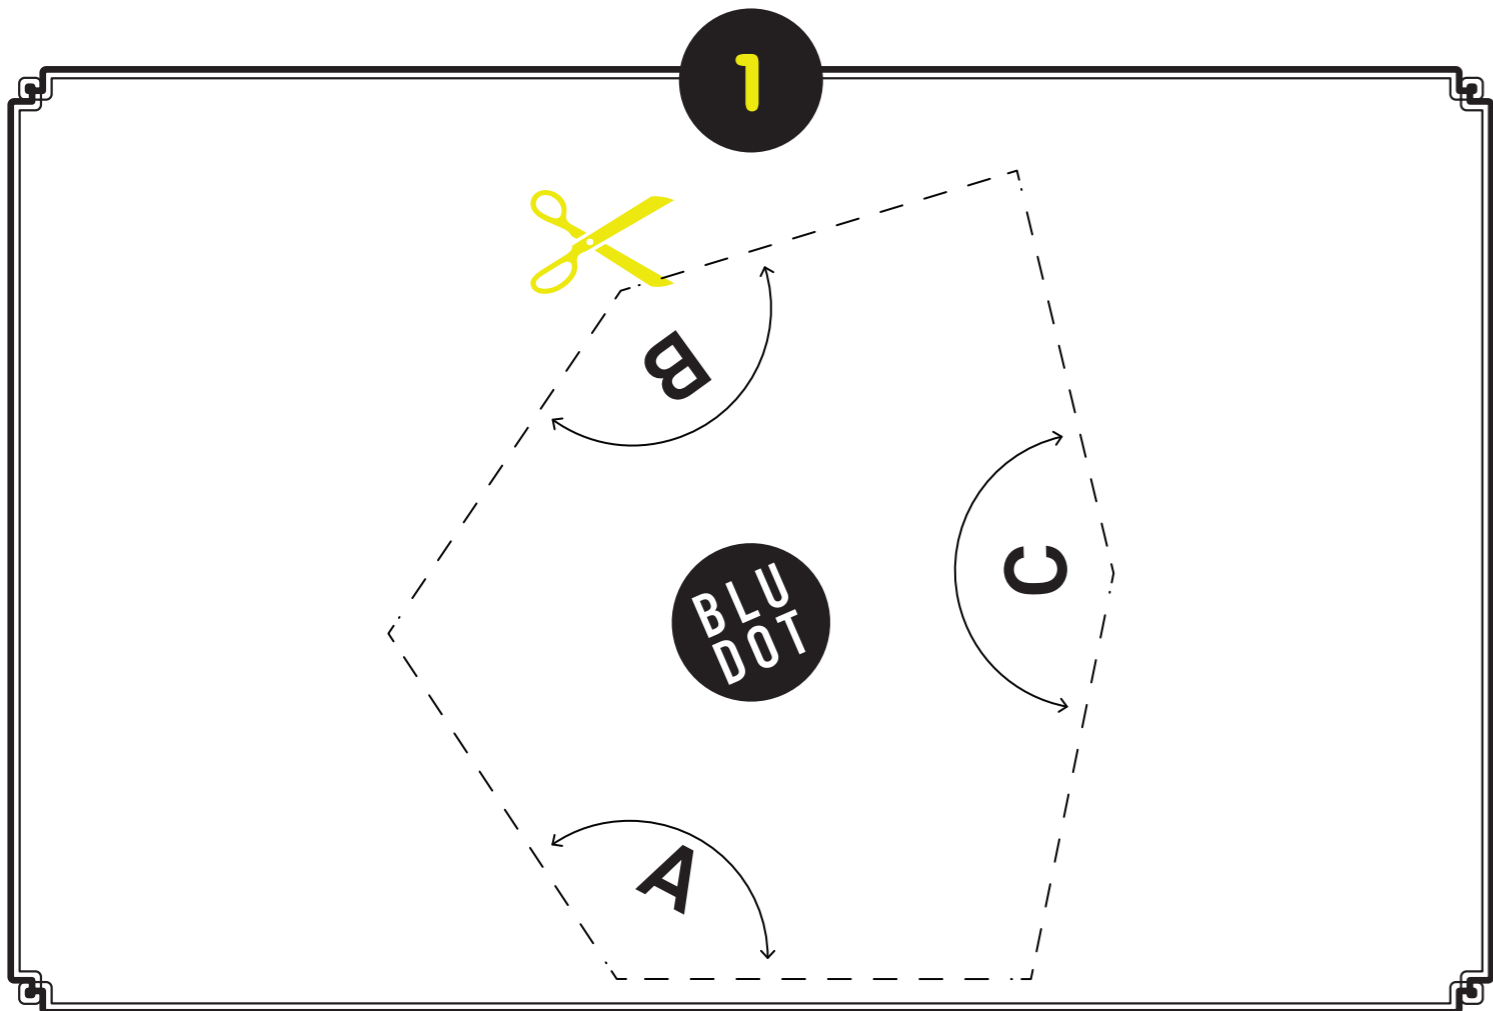


4

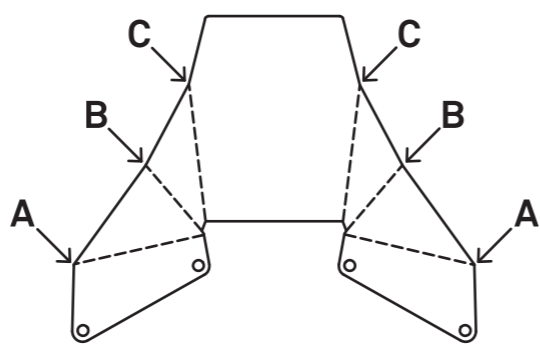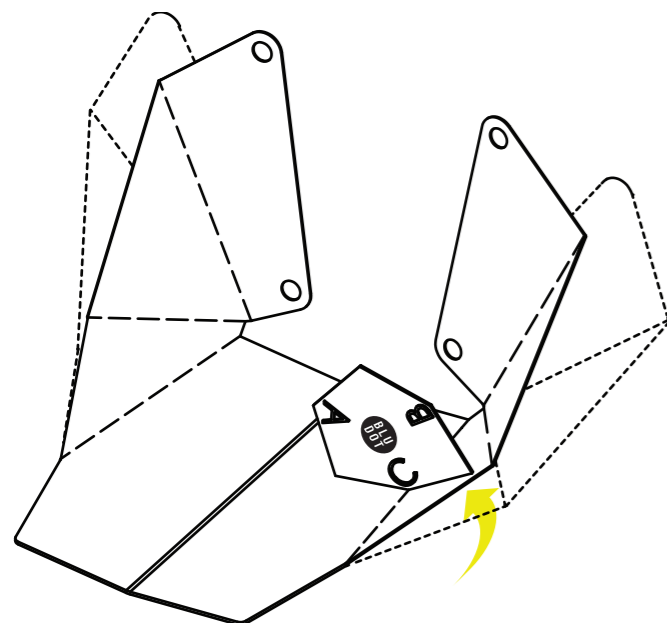


6


Rotate plastic sockets to receive leg assemblies.

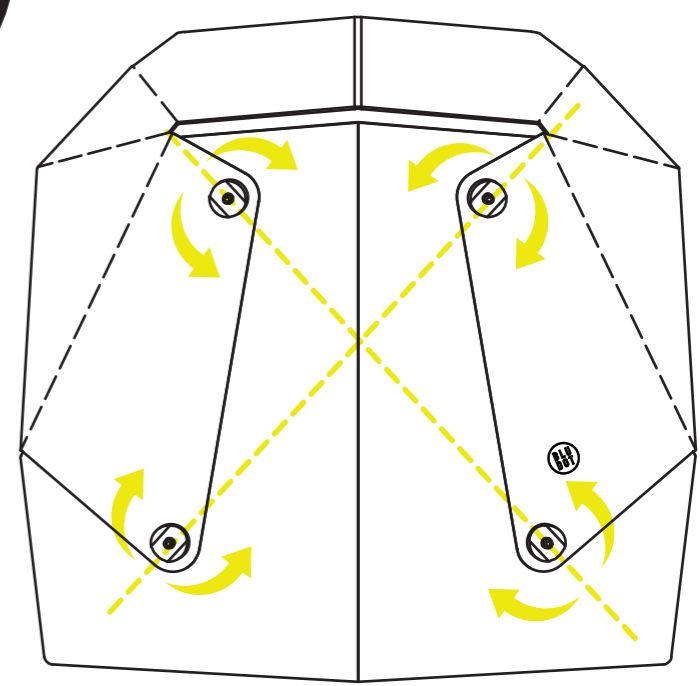



5

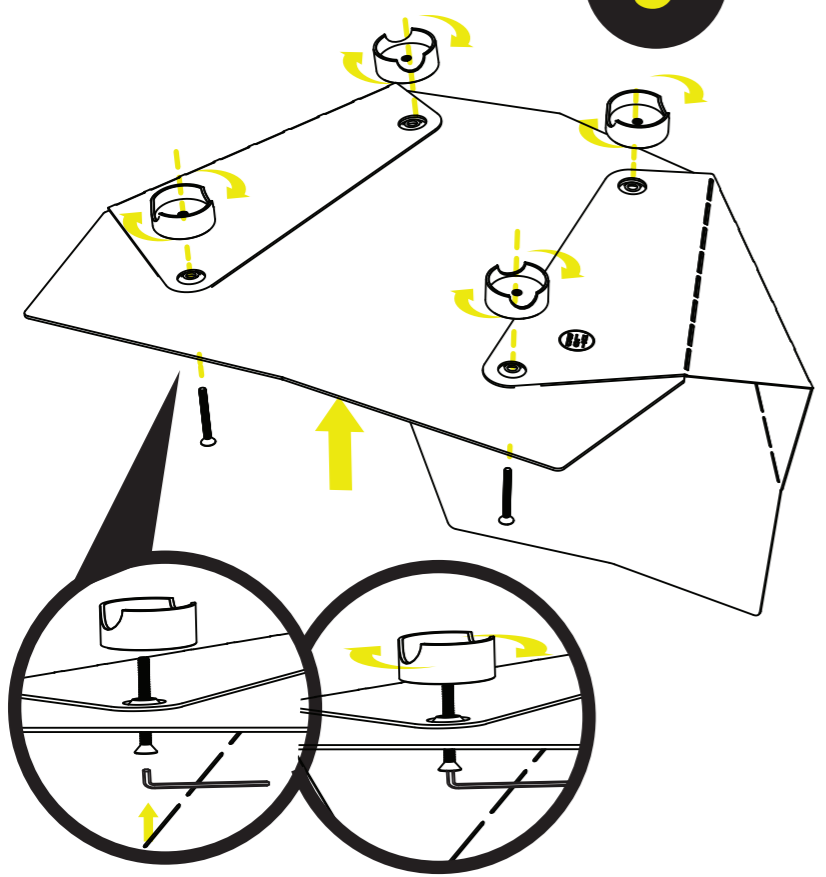

Fasten seat and back until flush but do not tighten fully.

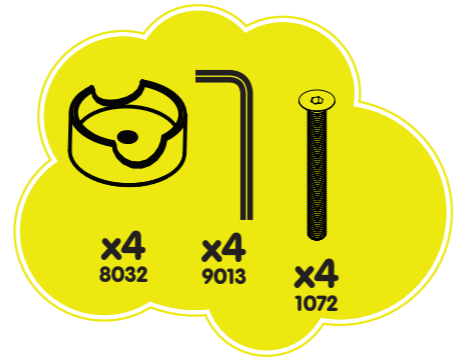


7a

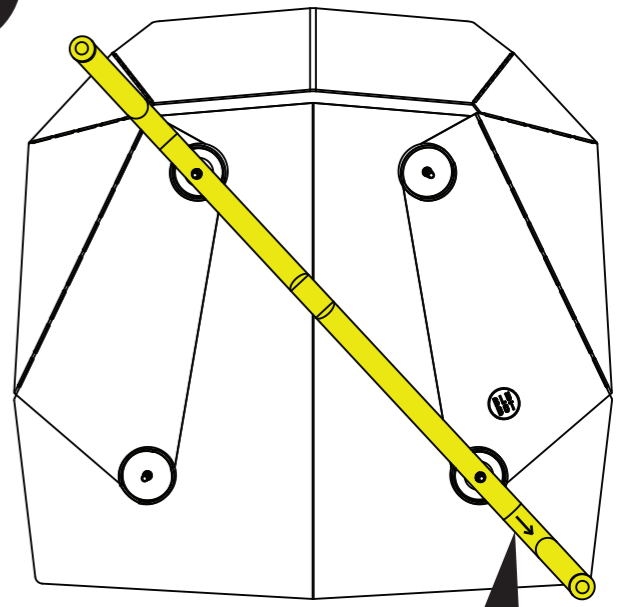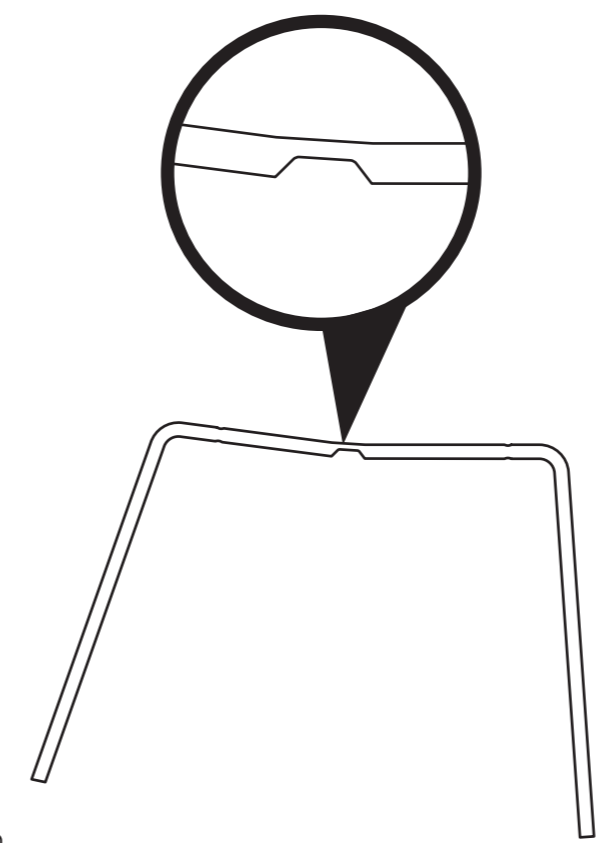


FRONT

7b

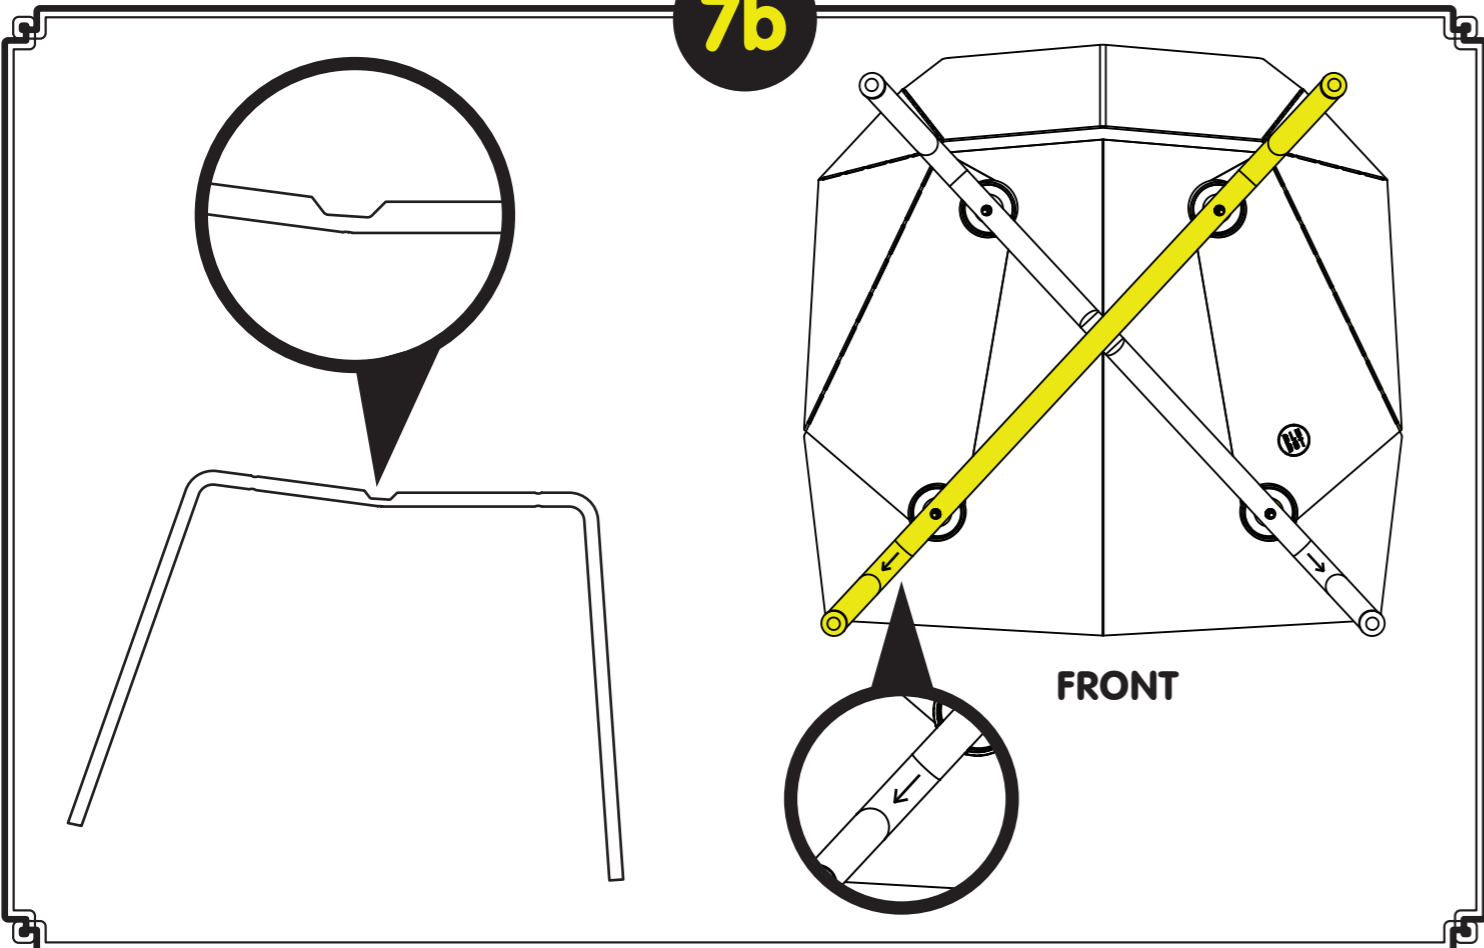

8

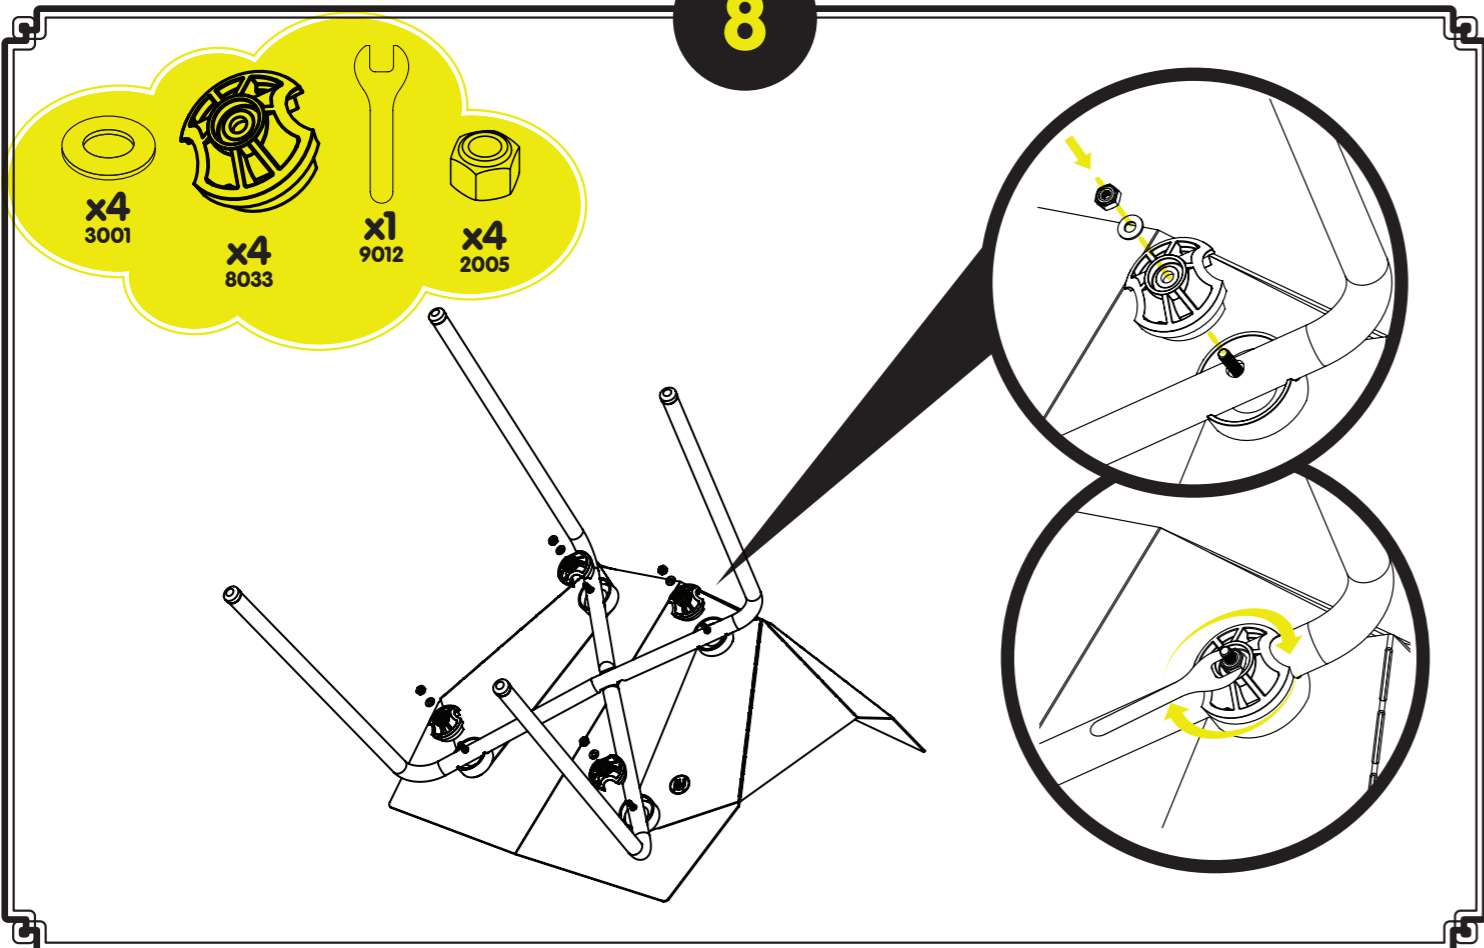

9

Tighten all fasteners; retighten periodically.



ADJUSTMENTS

TO REDUCE GAPPING AT (A):
TIGHTEN BOLT (A), THEN TIGHTEN NUT (B).

TO REDUCE GAPPING AT (B):
TIGHTEN NUT (B), TIGHTEN BOLT (A).