

BLU
DOT

TOTEM

ASSEMBLY NOTES



JUST ADD WATER!

CARE

Clean powder-coated unit with a soft cloth or sponge using a mild detergent, such as dish soap, and warm water. Wipe completely dry with a soft cloth.




PARTS

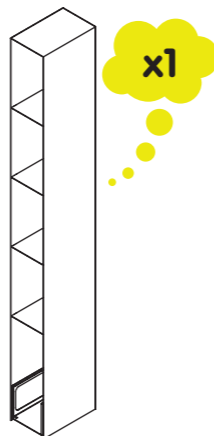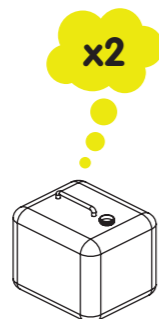


1

x2

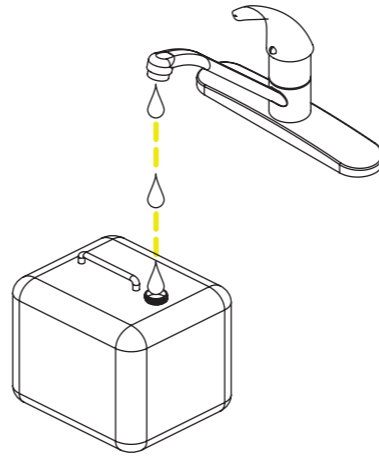


2


x2

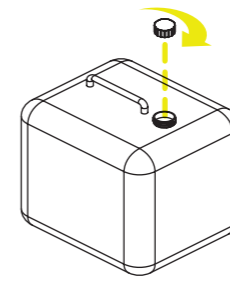

3

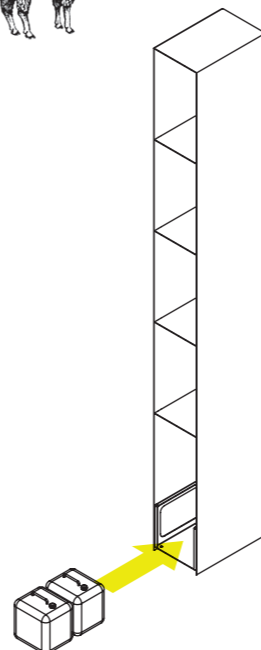

4

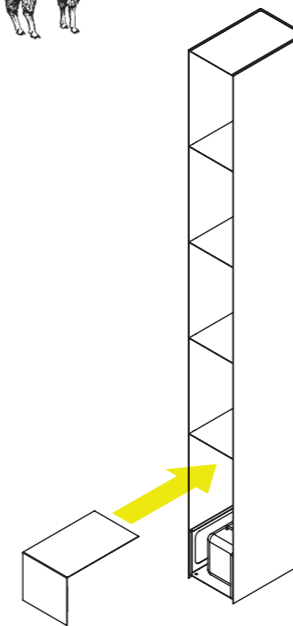

5

